

MAHLE Industrialfiltration is now Filtration Group. For more information, visit www.fluid.filtrationgroup.com

# Automatic metal-edge filter AF 73 G/AF 93 G

with radial scraper cleaning

Connection size G2, screw-in flange DN 50 and DN 65

#### 1. Features

Filtration Group automatic metal-edge filters are suitable for all applications where low or high-viscosity liquids or pastes have to be filtered and homogenised.

These compact, inline filter systems can be designed for semi or fully automatic cleaning. The system is cleaned by rotating the filter cartridge against a spring actuated scraper. The AF 93 G version also has integrated preseparation.

#### Advantages:

- Extended filter service life due to the use of a cleanable element
- Cleaning is possible without interrupting filtration
- Precise separation quality in accordance with the metal-edge principle
- Sturdy filter cartridge made of triangular stainless steel wire on a rugged core element
- Efficient filter cleaning assures maximum process stability
- Solid construction and high-quality materials for a long service life
- Modular system for optimum filter selection (small Vario series)
- Modular Filtration Group Vario system for optimum filter selection
- Material variants open up a wide range of applications
- Gas-tight shaft seals available optional
- Application in Ex zone 1 and 2 optional
- Easy maintenance
- Worldwide distribution



#### 2. Operating principle

The Filtration Group AF 73 G and AF 93 G metal-edge filters belong to the small Vario series. The Filtration Group metal-edge filter system is used to filter and homogenise a wide range of liquids and pastes.

This compact, inline filter system consumes no filter material, which means there is also no need for subsequent disposal. The filter is cleaned either automatically or semi-automatically without interrupting operation. The concentrated solids are drained off simply by opening the system for a short time.


The medium to be cleaned is guided into the filter housing under pressure or in suction mode. It flows inward through the Filtration Group filter cartridge. The solids are separated on the surface of the triangular filter cartridge wires. The filtered fluid exits the filter housing at the top opposite the inlet connection.

In the AF 93 G version, the tangential flow around the tube of the integrated preseparator relieves the load on the filter cartridge from coarse and heavy particles.

The filter is cleaned either when a preset differential pressure limit is reached or after a specified cycle time elapses. The Filtration Group filter cartridge is rotated against a spring actuated scraper for this purpose. The special gap geometry of the filter cartridge guarantees efficient cleaning.

The particles or agglomerates are skimmed from the surface and settle in the collection cone. The patented filter cartridge bearing (AKF system) prevents high axial forces and facilitates the cleaning process.

The residue that has settled in the collection cone can be emptied via the drain valve either when the machine is at a standstill or during filtration

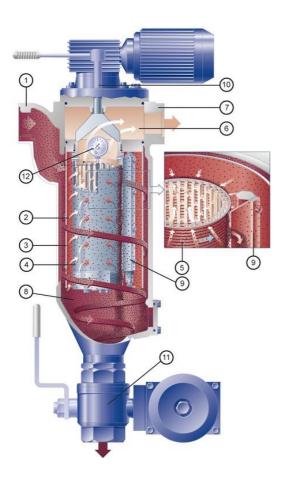

Used Filtration Group filter cartridges in the AF 73 G and AF 93 G metal-edge filters:

## Filtration Group coiled cartridge (standard):

- Optimum cleaning by means of sharp-edged triangular wire
- Large effective filter surface
- Small, precise gap widths
- High differential pressure stability and torsional strength
- Several material combinations possible




#### Filtration Group welded cartridge:

- High wear resistance to abrasive media
- Sturdy trapezoidal wire for high-viscosity media
- Welded design
- Manufactured in stainless steel


#### Filtration Group perforated foil:

- Specified sharp-edged hole diameter
- Asymmetric hole pattern
- Suitable for filtering fibrous waste material
- Manufactured in stainless steel or nickel

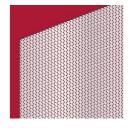

- 1 Tangential inlet connection
- 2 Inlet plenum
- 3 Preseparator tube for AF 93 G
- 4 Filtration Group filter cartridge
- 5 Triangular wire winding
- 6 Plenum for filtered fluid
- 7 Outlet connection
- 8 Particle collection cone
- 9 Scraper
- 10 Cleaning drive with gear motor or hand ratchet
- 11 Drain valve (automatic or manual)
- 12 Differential pressure indicator/switch

#### 3. Technical data

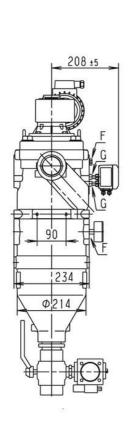

- 1 Cleaning drive, worm gear motor can be mounted at each 90° position
- 2 Optional ratchet
- 3 Lifting eyebolts
- 4 Vent screw G1/4
- 5 Optional screw-in flanges DN 50 or DN 65 (the motor is mounted turned 90°)
- 6 Optional differential pressure indicator/switch
- 7 Mounting holes M12
- 8 Mounting holes M8
- 9 Optional P1 gauge
- 10 Name-plate
- Optional drain valve, manual or automatic mode
- 12 Clearance required = 600 mm

#### Filter data

Max. operating pressure: 16 bar; optional 25 bar, 40 bar (higher pressure ratings on request)

Max. operating temperature:

Materials:

100 °C (higher temperature ratings

on request)
Housing and cover:

Nodular cast iron

- Internals: Nodular cast iron, steel
- Bearing bushes: PTFE based
- Seals: FPM (Viton)
- Coiled cartridge: 1.4571 or 1.4571/Al (Δp max. 30 bar)
- Welded cartridge: 1.4571

(∆p max. 10 bar)

Perforated foil element: 1.4571 or Al,
 1.4571 or Al, Ni (Δp max. 10 bar)

Cover fastening:

4 x M20 hexagon screws A-inlet, B-outlet, C-drain: G2

Connections and nominal - diameters: -

- F-gauge: G¼

- G-indicator: G1/8

- All threaded holes acc. to

DIN 3852 X

Optional A/B/C screw-in flanges
 DN 50, A/B DN 65 acc. to

EN 1092-1/05A

Drive shaft seal: Lip seal with O-ring
Outside coating: Synthetic resin primer, blue

acc. to RAL 5007

#### Motor data

Worm gear motor Multi-range winding

V	Hz	kW	rpm	Α
△ 230 ± 10%	50	0.18	17	1.2
人 400 ± 10%	50	0.18	17	0.7
△ 266 ± 10%	60	0.22	21	1.1
人 460 ± 10%	60	0.22	21	0.7

Protection class: IP55, insulation class F; output torque: 52 Nm

#### Optional:

- Ex protection acc. to ATEX 2014/34/EU
- Electrical design in Ex II 2G T3
- Mechanical design in Ex II 2G c T3

Weight: 73 kg (with ratchet) or 82 kg (with motor)

Volume: 12 I

#### Other types available on request!


Technical data is subject to change without notice!

#### 4. Design and application

Cartridge type (see section 6)	Total surface	Gap width in µm/ effective filter surface in cm²														
(See Section 6)	III CIII-															
		30	40	50	60	80	100	130	160	200	250	360	500	1000	1500	2000
AF 6016	862	48	63	77	91	117	142	176	206							
AF 6026	862			50	59	77	95	119	142	170	203	264	328	473	555	608
AF 6036	862	48	63	77		117	141	175	206							
AF 6046	862			50	59	77	94	119	141	170	202	263	326	471	553	606
AF 6066	836												184	302	385	446
AF 6076	836					63	77	97	117	141	169	224	282			
AF 6086	836			56	67	89	112									
AF 50116	836						188			155			188			
AF 50126	836						82			147			228			
AF 50136	836						82			147			228			
AF 6006	836													190	278	190

### Recommended design

#### Cleaning and emptying

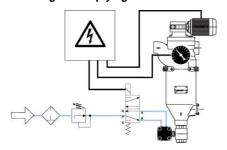

#### Fully automatic operation:


Filtration usually takes place under pressure. The filter is cleaned after a programmed time or a preset number of cycles or according to the differential pressure. We recommend cleaning the system at approximately 4 times the initial differential pressure. The cleaning motor is operated for around 10 seconds (about three turns of the filter cartridge). This is sufficient to clean the filter thoroughly. The motor may need to run continuously in exceptional cases. The drive shaft is always turned clockwise. The drain valve (x) is opened in order to empty the filter. Depending on the residue concentration, this can either take place synchronously with cleaning or be time or cycle controlled.

The opening time of the drain valve can be set between 2 and 6 seconds. The filter can be emptied in suction mode using a buffer or by interrupting the filtration process.

Semi-automatic and manual operation are also possible.

Refer to the Instruction Manual for further information.

#### 5. Efficiency curves

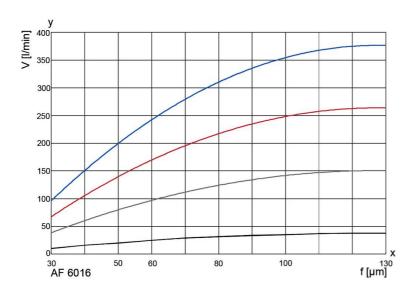

The curves indicate the volume flow

through the complete filter system (filter housing including cartridge) and are referred to a differential pressure of 0.3 bar. Specific process information is essential to guarantee reliable operation of an automatic filter.

Viscosity in mm<sup>2</sup>/s 1 mm<sup>2</sup>/s 33 mm<sup>2</sup>/s 100 mm<sup>2</sup>/s 500 mm<sup>2</sup>/s

y = Volume flow V [l/min]  $x = Gap width f [\mu m]$  $mm^2/s = cst$ 

#### 6. Type number key

#### Type number key with selection example for AF 7363-1321-40200/G3

#### Size

**AF 736** 1 x 110x265 No. of steps x diameter x length [mm]

**AF 936** 1 x 110x265 No. of steps x diameter x length [mm], with integrated pre-separation

#### Cleaning drive

- Ratchet
- Gear motor 230/400 V, 50 Hz or 266/460 V, 60 Hz
- Gear motor 230/400 V. 50 Hz Ex II 2G T3

#### Inlet and outlet connections

- 14 Screw-in flange DN 50 for cast design
- 15 Screw-in flange DN 65 for cast design
- 18

#### Permissible operating pressure in bar (housing/cover)

- 1 PN 10
- 2 PN 16
- PN 25
- PN 40

#### Material Seal FPM, bearing PTFE

- Housing and cover nodular cast iron, steel, aluminium
- Housing and cover steel, grey cast iron or nodular cast iron, internals stainless steel 1.4301/1.4571
- Housing and cover steel, grey cast iron or nodular cast iron, aluminium-free

#### Differential pressure indicator and switch

- PiS 3076, switching level at 1.2 bar, static 63 bar, aluminium/FPM
- PiS 3076, switching level at 0.7 bar, static 63 bar, aluminium/FPM
- PiS 3170, digital ∆p gauge, 2 switching levels settable from 0 to 16 bar
- PiS 3175, digital  $\Delta p$  gauge, 2 pressure transmitters settable from 0 to 16 bar
- PiS 3076, switching level at 2.2 bar, static 63 bar, aluminium/FPM
- PiS 3180 Ex II 2G Exd IIC T5, 4 20 mA signal, static max. 40 bar, stainless steel

### Valves and control throttles

Without/special version

#### Drain valve

- 1 Ball valve, manual
- 2 Ball valve, electropneumatic 24 V
- Ball valve, electropneumatic 230 V
- 4 Ball valve, electric 24 V
- Ball valve, electric 230 V

#### Cleaning valve

Without/special version

#### Optional features

Without/special version

- 2 -XXXX (end number for special version)/G3\* 0 O

3

- 13

2

-4

G1 cast iron, Version 1

**AF 736** 

G3 cast iron, Version 3

End number	Special version
3001	Standard complete inner assembly, without housing or drive
3002	Standard complete inner assembly, without housing, with drive
3700	PTFE seals
4166	3 scraper assembled at outline (120°)
Other numbers	On request

<sup>\*</sup>end number completion:

60	Coiled or welded cartridge with triangular wire winding or perforated plate									
50	Perforated foil									
	Material	Core ele	ment	Filter medium	Clamp rings	Wire width in mm				
	Perforated plan	te								
	0		-	1.4301	-	-				
	Coiled cartridg	je								
	1		Al	1.4571	1.4571	0.5				
	2		Al	1.4571	1.4571		0.8			
	3	1	.4581	1.4571	-		0.5			
	4	1	.4581	1.4571	-	0.8				
	Welded cartrid	ge								
	6		-	1.4571	1.4571	1.8				
	7		-	1.4571	1.4571	1				
	8		-	1.4571	1.4571	0.75				
Perforated foil										
	11		Al	Ni	1.4571	-				
	12		Al	1.4571	1.4571	-				
	13		.4571	1.4571	1.4571	-				
	Ove	Overall length Diameter x length in mm								
	6									
		Gap width	/rating in µm	see 4. Design and app	olication)					
		003	30 µm	010	100 μm	036	360 µm			
		004	40 µm	013	130 µm	050	500 µm			
		005	50 µm	016	160 µm	100	1000 µm			
		006	60 µm	020	200 μm	150	1500 µm			
		800	80 µm	025	250 μm	200	2000 μm			
			eter <b>at perfora</b>							
		010	100 µm	020	200 μm	050	500 μm			
			Other filter rati	ngs on request						

## 7. Spare parts

No.	Designation	Materia	Material no.				
		FPM/C steel	PTFE/VA				
1	Bush kit		70308169				
2	Seal kit (complete)*	70315877	70315880				
3	Scraper		71116805				
4	Spring kit		79753492				
5	Filter cartridge	See name	e-plate				

<sup>\*</sup>Standard lip seal G3 Version

Please contact us for detailed technical information, any open questions about options, accessories and for general expert advice. Completion of the relevant questionnaire would facilitate in the coordination of all important Parameters.

Comprehensive documentation on our filter range, filter elements and accessories can be provided. About installation and operation, please refer to the Instruction Manual.

Filtration Group GmbH Schleifbachweg 45 D-74613 Öhringen Phone +49 7941 6466-0 Fax +49 7941 6466-429 fm.de.sales@filtrationgroup.com www.fluid.filtrationgroup.com 04/2019