

RES-5012

Operating instructions



Important features

- Complete control via EtherCAT® interface¹ (2 x RJ-45)
- Automatic zeroing (AUTOCAL)
- Automatic optimisation (AUTOTUNE)
- Automatic configuration of the secondary voltage and current range (AUTORANGE)
- Automatic phase correction (AUTOCOMP)
- Automatic frequency adaptation
- Booster output
- Analogue output 0...10 VDC for ACTUAL temperature
- Alarm function with error diagnosis
- Heating element alloy and temperature range can be selected
- Wide voltage range for the use of 110...415 V
- Eight channels for administration of various calibration values
- Micro-USB interface for ROPEXvisual®
- cULus approval

1. EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

Contents

1	Revision list	3	8	Device functions	20
2	General information	3	8.1	LEDs and controls	20
2.1	Copyright	3	8.2	EtherCAT® communication	22
2.2	Intended use	3	8.3	EtherCAT® Slave Information (ESI) ..	22
2.3	Heatsealing band	3	8.4	Communication protocol	23
2.4	Impulse transformer	4	8.5	Input data	23
2.5	Current transformer PEX-W4/-W5	4	8.6	Output data	26
2.6	Line filter	4	8.7	Object dictionary	29
2.7	Standards / CE marking	4	8.8	Integrated web server	41
2.8	Maintenance	5	8.9	Undervoltage detection	44
2.9	Transportation	5	8.10	Temperature meter (actual value output)	45
2.10	Disposal	5	8.11	Booster connection	46
3	Use	6	8.12	USB interface for visualization software	47
4	Functional principle	6		ROPEXvisual®	47
5	Device features	7	8.13	AUX interface	47
6	Mounting and installation	7	8.14	Total cycle counter	47
6.1	Installation sequence	7	8.15	Operating hours counter	47
6.2	Installation steps	9	8.16	Data memory for error messages and	48
6.3	Power supply	10		AUTOCAL	48
6.4	Line filter	11	8.17	Built-in clock (date and time)	48
6.5	Current transformer PEX-W4/-W5	11	8.18	System monitoring / alarm output ...	48
6.6	Wiring diagram (standard)	13	8.19	Error messages	49
6.7	Wiring diagram with booster connection	14	8.20	Fault areas and causes	54
7	Startup and operation	15	9	Factory settings	56
7.1	View of the device	15	10	Technical data	56
7.2	Device configuration	15	11	Dimensions	59
7.3	Replacing and burning in the heatsealing	17	12	Modifications	59
	band	17	12.1	Modifications (MODs)	59
7.4	Startup procedure	18	13	How to order	60
			14	Index	62

1 Revision list

Version	Change
2	<ul style="list-style-type: none"> • Creation of documentation

2 General information

This RESISTRON[®] temperature controller is manufactured according to EN 61010-1. In the course of its manufacture it passed through quality assurance, whereby it was subjected to extensive inspections and tests. As a result of this, the product left our factory in perfect condition.

Please carefully read through the operating manual before using the RESISTRON[®] temperature controller. Keep the operating manual for later reference and make sure that information and functions important for the user are available.

The recommendations and warning notes contained in these operating instructions must be complied with, in order to guarantee safe operation.

The device can be operated within the limits indicated in the "Technical Data" without impairing its operational safety. Installation and maintenance may only be performed by technically trained, skilled persons who are familiar with the associated risks and warranty provisions.

2.1 Copyright

All contents, in particular texts, photographs and graphics, are protected by copyright. All rights, including to replication, publication, editing and translation, are reserved.

2.2 Intended use

RESISTRON[®] temperature controllers may only be used for heating and temperature control of heatsealing bands which are expressly approved for them, and providing the regulations, notes and warnings contained in these instructions are observed.

In case of non-observance or use contrary to the intended purpose, there is a risk that safety will be impaired or that the heatsealing band, electrical wiring, transformer etc. will overheat. This is the personal responsibility of the user.

2.3 Heatsealing band

The use of suitable heatsealing bands is a basic prerequisite for reliable and safe operation of the system.

The resistance of the heatsealing band which is used must have a positive minimum temperature coefficient in order to guarantee trouble-free operation of the RESISTRON[®] temperature controller.

The temperature coefficient must be specified as follows:

$$TCR = 10 \times 10^{-4} \text{K}^{-1} \text{ or } \text{K}^{-1} \text{ or } \text{ppm/K}$$

e.g. Alloy-20: TCR = 1100 ppm/K
 NOREX: TCR = 3500 ppm/K
 Vacodil: TCR = 1100 ppm/K

The RESISTRON[®] temperature controller must be set and coded according to the temperature coefficient of the heatsealing band.

The temperature coefficient must be taken from the ROPEX application report and must be set accordingly.

⚠ The use of incorrect alloys with a too low temperature coefficient and incorrect coding of the RESISTRON® temperature controller leads to uncontrolled heating of the heatsealing band, which will ultimately burn out!

The original heatsealing bands must be clearly identified by means of suitable markings as well as the connector geometry, length, or other means to ensure that replacement bands are identical.

2.4 Impulse transformer

A suitable impulse transformer is necessary in order to guarantee trouble-free operation of the control loop. This transformer must be designed according to EN 61558 (isolating transformer with reinforced insulation) and have a one section bobbin. When the impulse transformer is installed, suitable touch protection must be provided in accordance with the national installation regulations for electrical equipment. In addition to this, water, cleaning solutions and conductive fluids must be prevented from seeping into the transformer.

Incorrect installation of the impulse transformer impairs electrical safety.

2.5 Current transformer PEX-W4/-W5

The current transformer supplied with the RESISTRON® temperature controller is an integral part of the control system.

Only the original ROPEX PEX-W4 or PEX-W5 current transformer may be used. Other transformers may cause the equipment to malfunction.

The current transformer may only be operated if it is correctly connected to the RESISTRON® temperature controller (see section "Startup and operation"). The relevant safety instructions contained in section "Power supply", must be observed. External monitoring modules can be used in order to additionally increase operating safety. They are not included in the scope of supply of the standard control system and are described in a separate document.

2.6 Line filter

ROPEX provides line filters in different power classes. The ROPEX application report lists the suitable line filter which can be ordered accordingly.

The use of an original ROPEX line filter is mandatory in order to comply with the standards and provisions mentioned in section 2.7 "Standards / CE marking" on page 4. This device must be installed and connected according to the instructions contained in section "Power supply" as well as the separate documentation enclosed with the line filter.

2.7 Standards / CE marking

The controller described here complies with the following standards, provisions and directives:

DIN EN 61010-1:2001 (2014/35/EU)	Safety requirements for electrical equipment for measurement, control and laboratory use (low-voltage directive): pollution degree 2, protection class I, measurement category I (for U_R and I_R terminals)
DIN EN 60204-1 (2006/42/EG)	Electrical equipment of machines (machinery directive)

EN 55011:2009+A1:2010 EN 61000-3-2:2006-04+A1:2009+A2:2009 EN 61000-3-3:2008 EN 61000-6-4:2007+A1:2011 (2014/30/EU)	EMC generic emissions: Group 1, Class A
EN 61000-6-2:2005 (2014/30/EU)	EMC generic immunity: Class A (ESD, RFI, burst, surge) <u>Exception:</u> Line voltage interruption acc. to EN 61000-4-11 is not fulfilled (this leads to a designated error message of the controller)
2011/65/EU	Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment.

Compliance with these standards and provisions is only guaranteed if original accessories and / or peripheral components approved by ROPEX are used. If not, then the equipment is operated on the user's own responsibility. The CE marking on the controller confirms that the device itself complies with the above-mentioned standards. It does not imply, however, that the overall system also fulfills these standards.

It is the responsibility of the machine manufacturer and of the user to verify the completely installed, wired and operationally ready system in the machine with regard to its conformity with the safety provisions and the EMC directive (see also section "Power supply"). If peripheral components (e.g. the transformer or the line filter) from other manufacturers are used, no functional guarantee can be provided by ROPEX.

2.8 Maintenance

The controller requires no special maintenance. Regular inspection and / or tightening of the terminals – including the terminals for the winding connections on the impulse transformer – is recommended. Dust deposits on the controller can be removed with dry compressed air.



Dust deposits and dirt from liquids result in a loss of function. Accordingly, installation in a switch cabinet or terminal cabinet with IP54 is recommended.

2.9 Transportation

Store and transport the device in its original carton.
After transport, perform a visual inspection for possible damage.

2.10 Disposal



This device is subject to Directive 2012/19/EU concerning the reduction of the increasing amount of waste electrical and electronic equipment and the disposal of such waste in an environmentally sound way.

To guarantee proper disposal and / or the recover of reusable material, please take the device to a designated municipal collection point and observe local regulations.

Careless, uncontrolled disposal can cause damage to the environment and human health. By ensuring that your product is disposed of or recycled in a responsible way, you can help protect the environment and human health.



This device must not be disposed of as residual waste!

3 Use

This RESISTRON[®] temperature controller is part of the “Series 5000”, whose main characteristic is microprocessor technology. All RESISTRON[®] temperature controllers provide temperature regulation of heating elements as are used in a variety of foil sealing processes.

The most common heating elements include:

- ribbon cables (straight and contoured)
- clincher bands
- beaded bands
- cutting wires
- heat-sealing blades
- soldering bows

The main application area is sealing or cutting of thermoplastics using the thermal impulse process.

The most common application areas are:

- vertical and horizontal form-fill-seal machines (VFFS and HFFS)
- bagging, filling and sealing machines
- film-wrapping machines
- bag-production machines
- group packaging machines
- foil sealing devices
- spout and hose sealing
- and much more

4 Functional principle

The resistance of the heating element, which changes with temperature, is measured by means of current and voltage measurement, displayed and compared with the specified setpoint value. Measurements are made 50 times per second in a 50 Hz network, 60 times per second in a 60 Hz network.

The primary voltage of the impulse transformer is adjusted following the leading edge principle if the measured values deviate from the setpoint value. The related current change in the heating element results in a rise in temperature and change of resistance. The change in resistance is measured and evaluated by the RESISTRON[®] temperature controller. The temperature controller adjusts the control variables according to the change and the set point.

Even the smallest thermal loads on the heating element are recorded and can be quickly and precisely corrected. Measurement of pure electric variables, together with the high measurement rate, result in a highly dynamic thermoelectric control circuit. The principle of primary-side transformer control proves to be especially advantageous as it permits a very large secondary current range with low power loss. This permits an optimal adjustment to the load and thus the desired dynamics with extremely compact device measurements.

5 Device features

The RESISTRON[®] temperature controller RES-5012 is equipped with a EtherCAT[®] interface. Through this interface, all functions and parameters can be parameterised by means of the higher level machine controller. In addition, important controller information is queried and can be processed accordingly.

The ACTUAL temperature of the heating element is output through the EtherCAT[®] interface and through an analogue output 0...10 VDC. The real heating element temperature can be visualised on an external display instrument (e.g. ATR-x) or via the operating unit of the machine controller.

The RES-5012 has an integrated error diagnosis that checks both the external system (heating element, wiring, etc.) and the internal electronics. A differentiated error message is output through the EtherCAT[®] interface in case of malfunction.

To increase operational security and immunity to interference, all EtherCAT[®] signals from the controller and heating circuit are electrically isolated.

Adjustment for different heating element alloys (alloy A20, Vacodil, etc.) and setting of the temperature range to be used (0...300 °C or 0...500 °C) can be made through coding switches on the temperature controller itself or through the EtherCAT[®] interface.

The compact design of the RESISTRON[®] temperature controller RES-5012 as well as the plug-in connecting terminals make mounting and installation easier.

An overview of the most important features and functions:

- Easy calibration of the heating element through AUTOCAL, the automatic zero-point setting.
- Eight channels permit switching of the calibration parameters during tool change.
- High control dynamics through AUTOTUNE, automatic adjustment to the controlled system.
- High flexibility: The AUTORANGE function covers a secondary voltage range of 0.4 V to 120 V and a current range of 30 A to 500 A.
- Automatic adjustment to the network frequency in the range of 47 Hz to 63 Hz.
- Wide voltage range for flexible use from 110 VAC to 415 VAC
- Easy and convenient system diagnosis and process visualisation through the free, downloadable software ROPEXvisual[®]
- Comprehensive error diagnosis over the EtherCAT[®] interface
- Booster output available for connecting a switching amplifier
- High process security through comprehensive options for evaluating the parameter data (e.g. temperature diagnosis or heat-up time monitoring)

6 Mounting and installation

↪ See also section 2 "General information" on page 3.



Mounting, installation and startup may only be performed by authorized persons who have received suitable instruction and are familiar with the associated risks and warranty provisions.



The supply voltage to the machine side must lie within the permitted voltage and frequency range of the RESISTRON[®] temperature controller. Otherwise, there is the danger of a defect.

6.1 Installation sequence

Proceed as follows to install the RESISTRON[®] temperature controller RES-5012:

1. Switch off the line voltage and the 24 VDC supply, and verify that the circuit is de-energized.
2. Mount the RESISTRON[®] temperature controller on a standard top hat rail (DIN TS35 rail according to DIN EN 50022) in the electrical cabinet. If several controllers are mounted on one rail, the minimum clearance specified in section 10 "Technical data" on page 56 must be allowed between them.
3. Wire the system in accordance with the instructions in section 6.3 "Power supply" on page 10, section 6.6 "Wiring diagram (standard)" on page 13, and the ROPEX Application Report. The information provided in section 6.2 "Installation steps" on page 9 must also be observed.
Wires used for control or measuring connections must always be laid inside the building.
4. An overcurrent protective device with a maximum rating of 10 A must be fitted when the device is installed, e. g.:
 - Miniature circuit breaker to EN 60898 (B, C, D, K, or Z characteristic)
 - Miniature circuit breaker to UL 489 (*) (B, C, D, K, or Z characteristic)
 - Fuse gG to IEC 60269
 - Class CC or Class J fuse to UL 248 (*)

The overcurrent protective devices marked (*) should be used in installations conforming to UL standards.

If one such device is not adequate for the heatsealing application, two separate overcurrent protective devices should be provided – one for the controller and one for the application (↪ ROPEX Application Report).

The overcurrent protective device must be located directly adjacent to the controller.

The minimum possible specification for this device is indicated in the ROPEX Application Report based on the calculated currents. If a larger overcurrent protective device is fitted, you must match the current carrying capacity of the other components accordingly (e. g. cables, impulse transformer etc.).

5. A disconnecting device must be provided when the system is installed; it must be marked as belonging to the system and fitted in a readily accessible position.
If a miniature circuit breaker is used, it can also perform the function of this device.
6. Connect the RESISTRON[®] temperature controller to the EtherCAT[®] master using a suitable (standard compliant) cable.




Check that all system connections – including the terminals for the impulse transformer windings – are securely attached.


7. Make sure the wiring conforms to all relevant national and international installation regulations.

6.2 Installation steps

Sample depiction

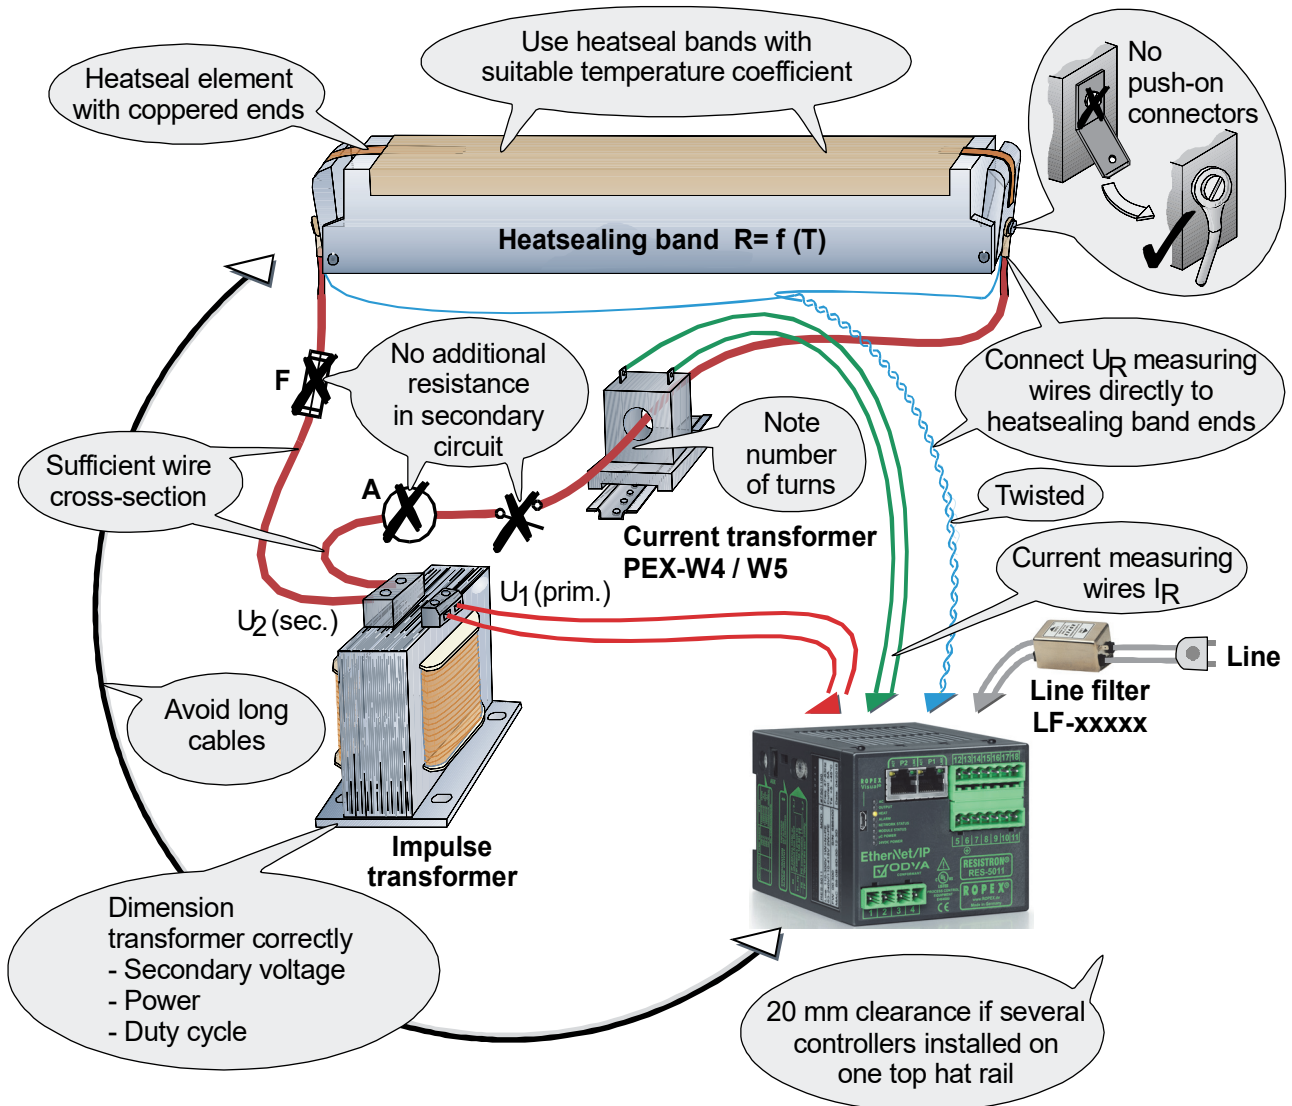

6.3 Power supply

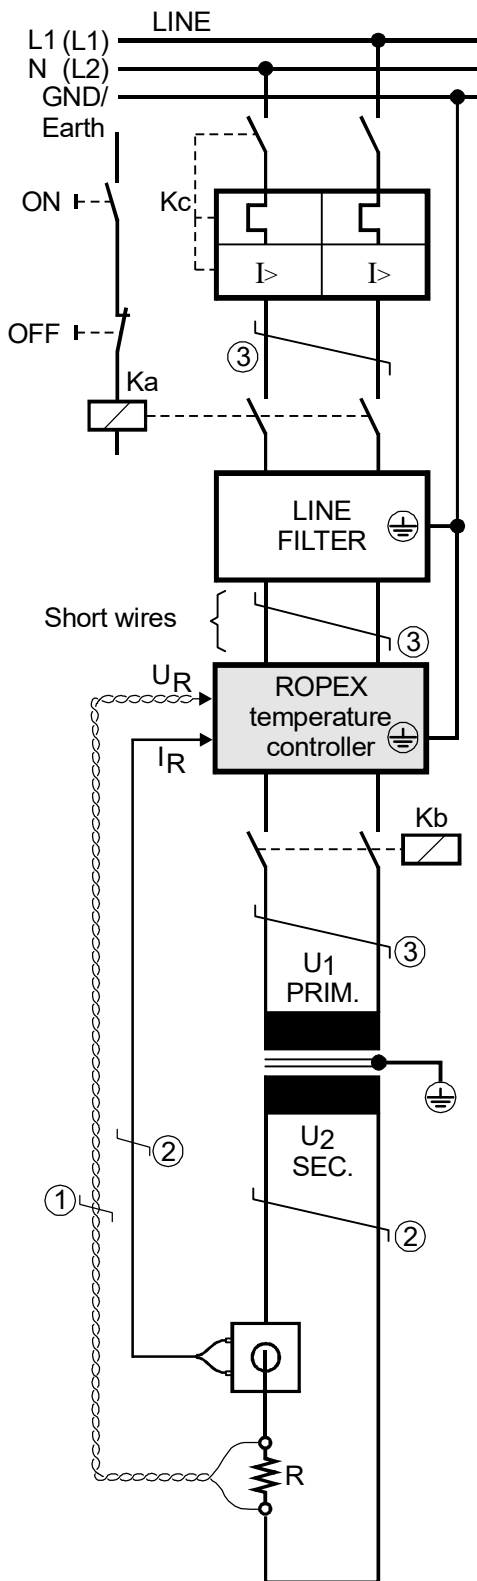

Line

Over-current protection

Double-pole circuit-breaker or fuses,
(☞ ROPEX Application Report)

⚠ Short-circuit protection only. RESISTRON® temperature controller not protected.

Relay Ka

For "HEAT ON - OFF" function (all-pole) or "EMERGENCY STOP".

Line filter

The filter type and size must be determined according to the load, the transformer and the machine wiring (☞ ROPEX Application Report).

⚠ Do not run the filter supply wires (line side) parallel to the filter output wires (load side).

RESISTRON® temperature controller

Relay Kb

Load break (all-pole), e.g. in combination with the alarm output of the temp. controller (ROPEX recommendation).

⚠ When using a series resistor RV-....-1 the relay Kb shall be installed.

Impulse Transformer

Designed according to EN 61558 (isolating transformer with reinforced insulation). Connect core to ground.

⚠ Use transformers with a one section bobbin. The power, duty cycle and voltage values must be determined individually according to the application (☞ ROPEX Application Report and "Accessories" leaflet for impulse transformers).

Wiring

The wire cross-sections depend on the application (☞ ROPEX Application Report).

- ① Wires must always be twisted (min. 20 turns/meter).
- ② These wires must be twisted (min. 20 turns/meter) if several control loops are laid together ("crosstalk").
- ③ Twisting (min. 20 turns/meter) is recommended to improve EMC.

6.4 Line filter

To comply with EMC directives – corresponding to EN 50081-1 and EN 50082-2 – RESISTRON control loops must be operated with line filters.

These filters damp the reaction of the phase-angle control on the line and protect the controller against line disturbances.



The use of a suitable line filter is part of the standards conformity and a prerequisite of the CE mark.

ROPEX line filters are specially optimized for use in RESISTRON control loops. Providing that they are installed and wired correctly, they guarantee compliance with the EMC limit values.


You can find the exact specification of the line filter in the ROPEX Application Report calculated for your particular heatsealing application.

For more technical information: ↪ "Line filter" documentation.

It is permissible to supply several RESISTRON control loops with a single line filter, providing the total current does not exceed the maximum current of the filter.

The wiring instructions contained in section 6.3 "Power supply" on page 10 must be observed.


Example drawing for LF-06480:

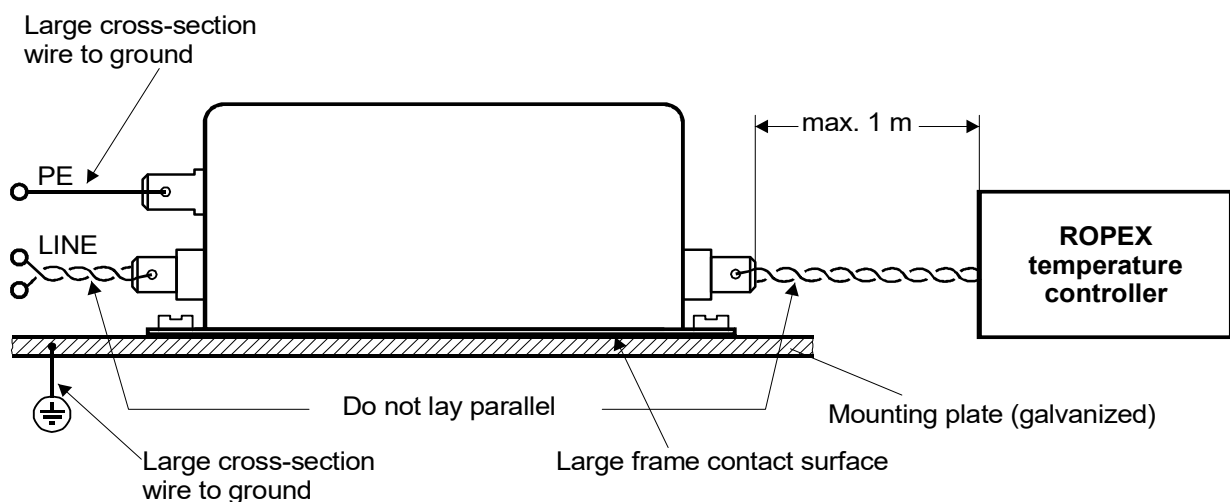


6.5 Current transformer PEX-W4/-W5

The PEX-W4/-W5 current transformer supplied with the RESISTRON[®] temperature controller is an integral part of the control system. The current transformer may only be operated if it is connected to the temperature controller correctly (↪ section 6.3 "Power supply" on page 10).

6.5.1 PEX-W4

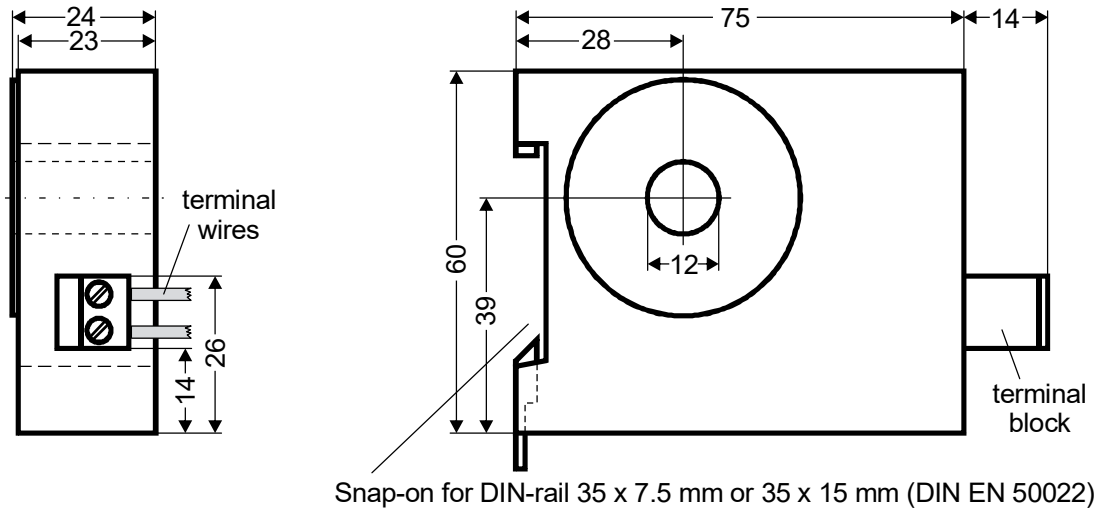


6.5.2 PEX-W5

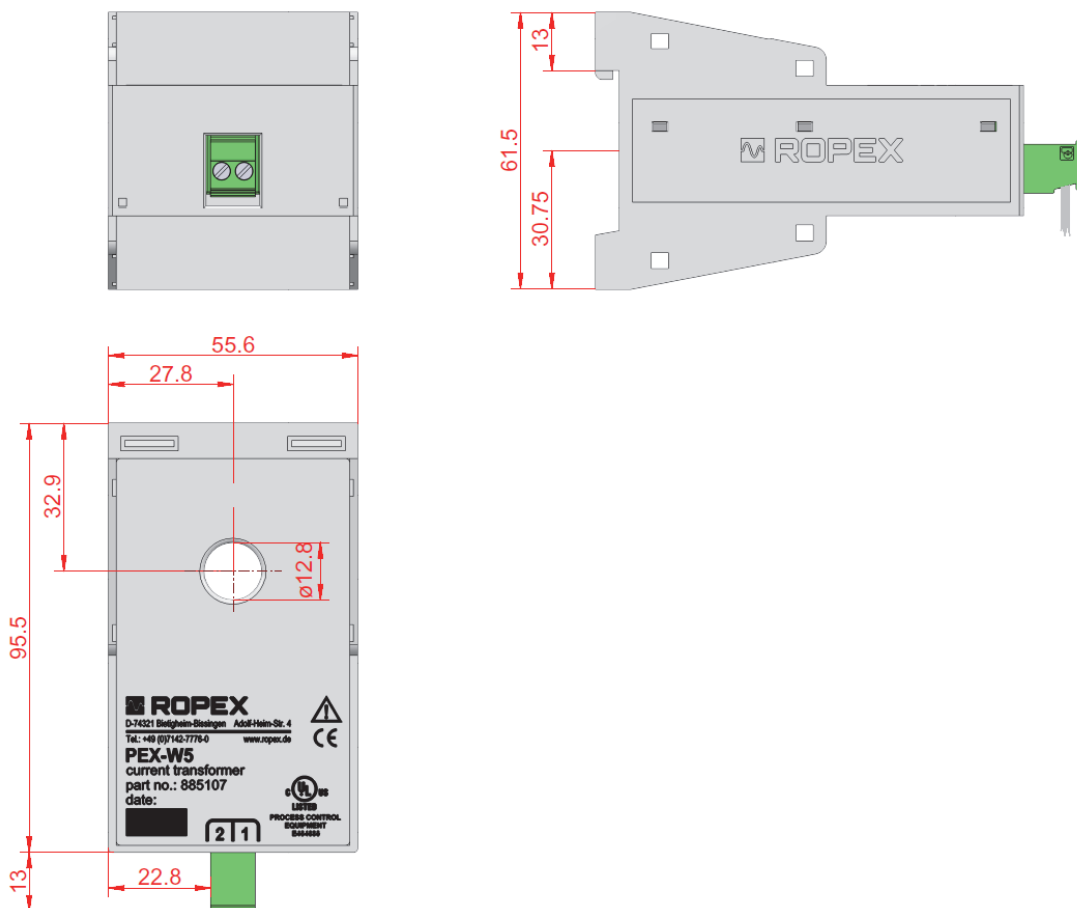


Mounting on DIN-rail 35 x 7.5 mm or 35 x 15 mm (DIN EN 50022).

6.6 Wiring diagram (standard)

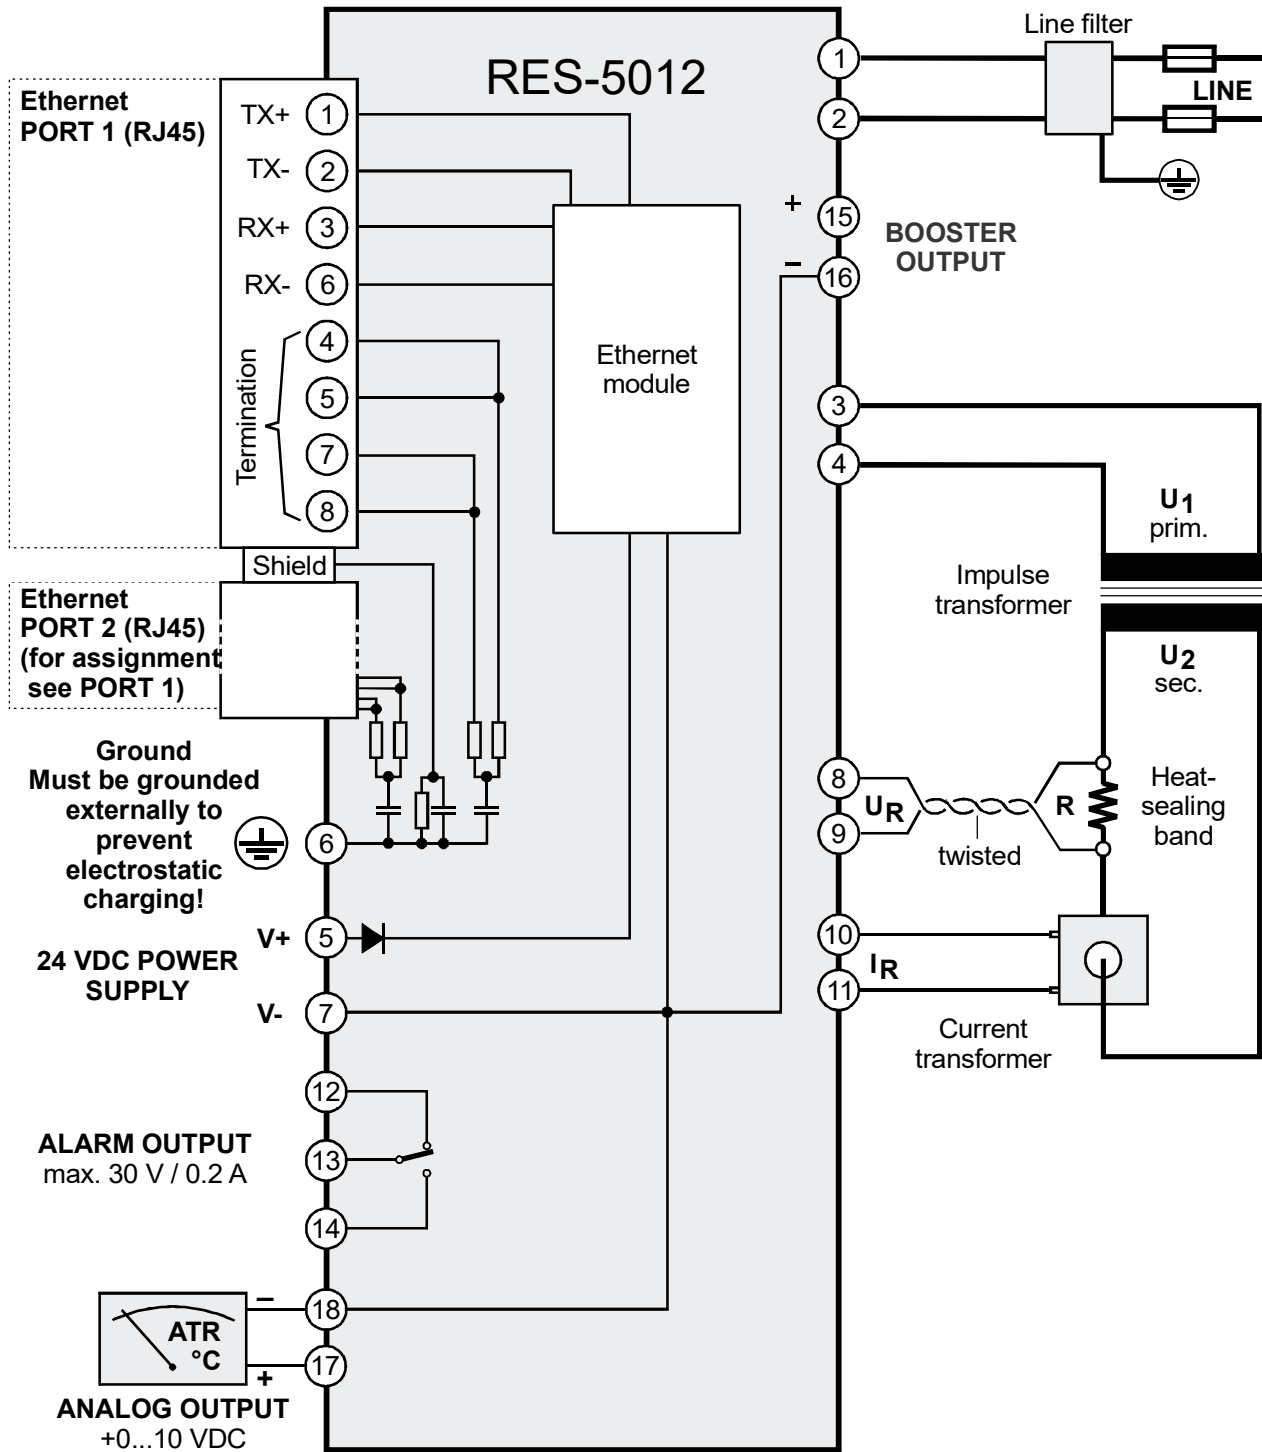


6.7 Wiring diagram with booster connection

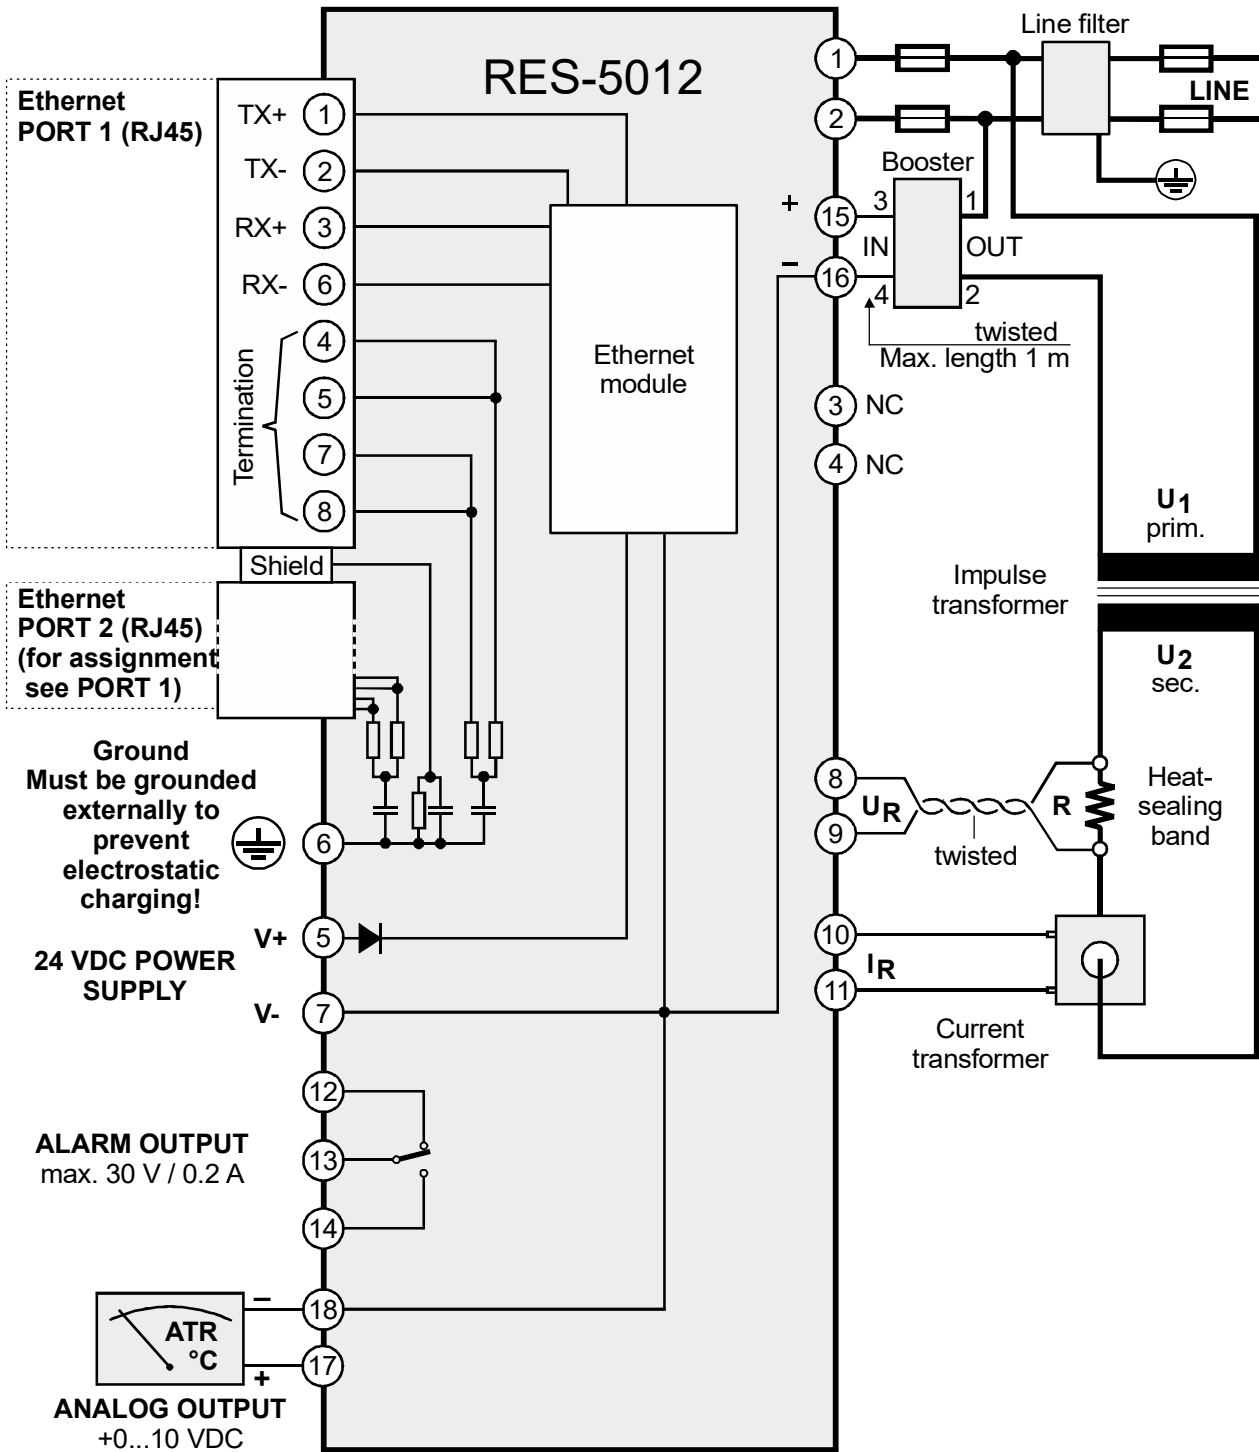

7 Startup and operation

7.1 View of the device

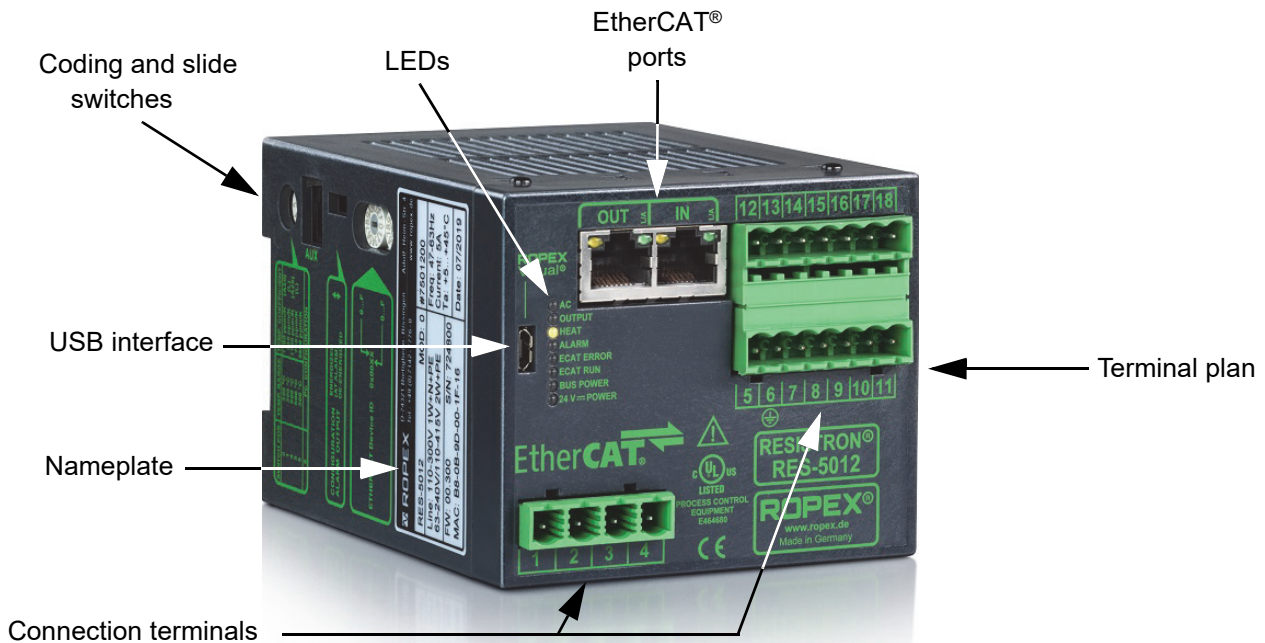

7.2 Device configuration



The controller must be switched off in order to configure the coding and slide switches.


7.2.1 Configuration of the secondary voltage and current ranges

The secondary voltage and current ranges are automatically configured during the automatic calibration function (AUTOCAL). The voltage is configured in the range from 0.4 VAC to 120 VAC and the current in the range from 30 A to 500 A. If the voltage and / or current are outside of the permissible range, a detailed error message appears on the controller (↪ section 8.19 "Error messages" on page 49).

If the secondary current I_2 is less than 30 A, the secondary high-current wire must be laid twice (or several times) through the PEX-W4, or PEX-W5 current transformer (↪ ROPEX Application Report).



7.2.2 Configuration of the rotary coding switch for the temperature range and alloy

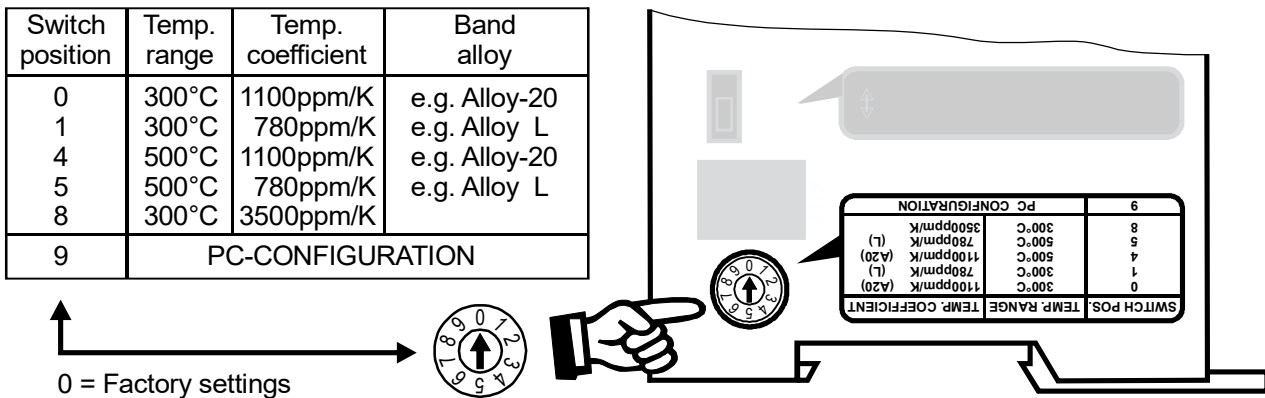

⚠ The setting of the rotary coding switch for the temperature range and alloy can be overwritten with the parameter data (↪ section 8.7 "Object dictionary" on page 29).

If the switch is set to "9", more temperature ranges and alloys can be selected in the ROPEX visualization software (↪ section 8.12 "USB interface for visualization software ROPEXvisual®" on page 47).


7.2.3 Configuration of the rotary coding switch for the Device ID

These coding switches allow you to set the least significant byte of the Device ID of the RES-5012 in the EtherCAT® network to a value between 0x0000 and 0x00FF. A new setting does not take effect until the next time the controller is switched on. The preset Device ID of the RES-5012 is configured as follows, depending on the settings of the rotary coding switches:


rotary coding switch	Device ID
00...FF	0x0000...0x00FF

Device ID selectable.

00 = factory default

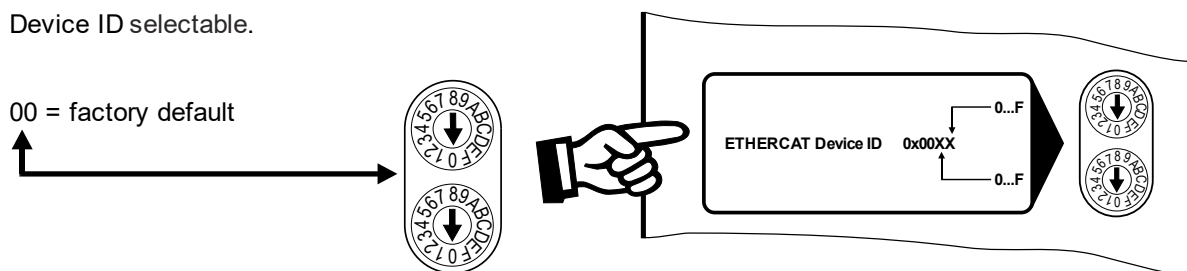

7.2.4 Configuration of the alarm relay

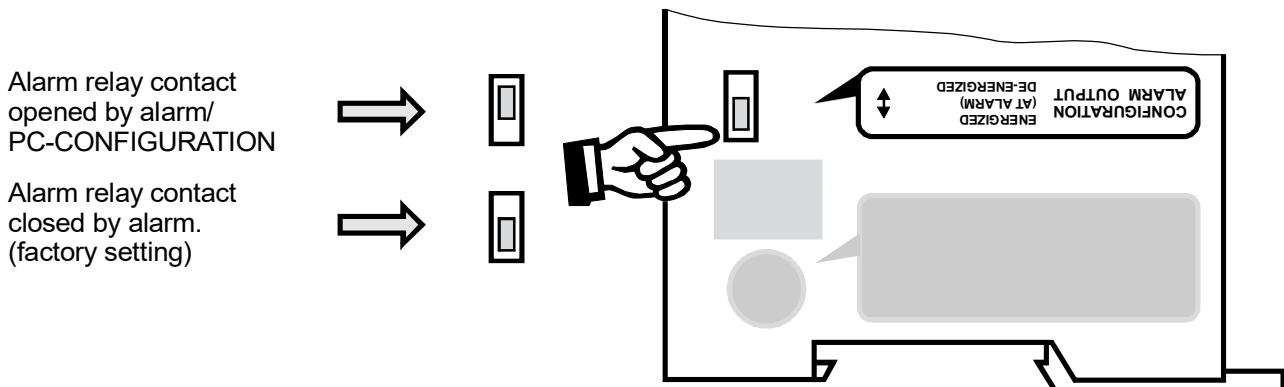

If the switch is set to "Alarm relay de-energized at alarm / PC CONFIGURATION", you can select more alarm output configurations in the ROPEX visualization software (see section 8.12 "USB interface for visualization software ROPEXvisual[®]" on page 47).

7.3 Replacing and burning in the heatsealing band

7.3.1 Burning in the heatsealing band

The heatsealing band is a key component in the control loop because it is not only a heating element but also a sensor. The geometry of the heatsealing band is too complex to be discussed at length here. We shall therefore only refer to a few of the most important physical and electrical properties.

The measuring principle used for this system requires a heatsealing band alloy with a suitable temperature coefficient TCR. Too low a TCR leads to oscillation or uncontrolled heating.

If a heatsealing band with a higher TCR is used, the controller must be calibrated for it.

The first time the heatsealing band is heated to approximately 200...250 °C, the standard alloy undergoes a once-only resistance change (burn-in effect). The cold resistance of the heatsealing band is reduced by approximately 2...3%. However, this at first glance slight resistance change results in a zero point error of 20...30 °C. The zero point must therefore be corrected after a few heating cycles, i.e. the AUTOCAL function must be run again.

To do this, the system must be cooled off completely.

After the first heating and zeroing, the heating element is burned in and the change of resistance stabilised. The heating element can now be used.

The burn-in effect described here does not occur if the heatsealing band has already been thermally pretreated by the manufacturer.

⚠ An overheated or burned-out heatsealing band must no longer be used because the temperature coefficient has been irreversibly altered.

A very important design measure is copper-coating or silver-coating of the heating element ends. The thermal characteristics change in this range through coating of the heating element ends. As a result, the ends remain cold, which permits exact temperature control and increases the useful life of the heating element.

7.3.2 Replacing the heatsealing band

The supply voltage (all poles) must be disconnected from the RESISTRON[®] temperature controller in order to replace the heatsealing band.

⚠ The heatsealing band must be replaced in accordance with the instructions provided by the manufacturer.

Each time the heatsealing band is replaced, you must calibrate the zero point with the AUTOCAL function while the band (and the environment, i.e. silicone, PTFE cover, sealing bar etc.) is still cold in order to compensate production-related resistance tolerances.

If a new heating element is used, the above-described procedure for burning in must be performed.

7.4 Startup procedure

Please also refer to section 2 "General information" on page 3 and section 3 "Use" on page 6.



Mounting, installation and startup may only be performed by authorized persons who have received suitable instruction and are familiar with the associated risks and warranty provisions.

7.4.1 Initial startup

Condition: The device must be correctly installed and connected (↪ section 6 "Mounting and installation" on page 7).

Proceed as follows to start up the controller for the first time:

1. Switch off the line voltage and the 24 VDC supply, and verify that the circuit is de-energized.
2. Link the ESI file into the EtherCAT® master (↪ section 8.3), then select the required parameters, make the connections and start the communication.
3. Make sure that the higher-level controller does not send values not equal to zero to the temperature controller.
4. Switch on the line voltage and the 24 VDC supply (the order is arbitrary).
5. When the voltage is switched on, the yellow "AUTOCAL" LED lights up for approximately 0.3 seconds to indicate that the controller is being powered up correctly. As long as the EtherCAT® communication is not active, neither the "ECAT RUN" LED nor the "ECAT ERROR" LED light up.



If the red "ALARM" LED lights up for 0.3...1.5 seconds when the voltage is switched on in addition to the yellow "AUTOCAL" LED, the configuration of this controller has been changed in the visualization software (↪ section 8.12 "USB interface for visualization software ROPEXvisual®" on page 47). In order to avoid malfunctions, please check the controller configuration before continuing the startup procedure.

6. The green "ECAT_RUN" LED lights up to indicate an active EtherCAT® communication.
7. One of the following states then appears:

"ALARM" LED	"OUTPUT" LED	ACTION
OFF	Short impulses every 1.2 s	Go to step 8
BLINKS fast (4 Hz)	OFF	Go to step 8
LIT continuously	OFF	Error diagnosis (↪ section 8.19)

8. Activate the AUTOCAL function while the heatsealing band is still cold by setting the AC bit (**AUTOCAL**) in the EtherCAT® protocol (↪ section 8.4 "Communication protocol" on page 23). The yellow "AUTOCAL" LED lights up for the duration of the calibration process (approx. 10...15 seconds). The AA bit (**AUTOCAL active**) is additionally set and a voltage of approximately 0 VDC appears at the actual value output (terminals 17+18). If an ATR-x is connected, it indicates 0...3 °C.

After the zero point has been calibrated, the "AUTOCAL" LED goes out and a voltage of 0.66 VDC (300 °C range) or 0.4 VDC (500 °C range) appears at the actual value output. If an ATR-x is connected, it must be set to "Z".

If the zero point was not calibrated successfully, the AL bit (**alarm active**) is set and the red "ALARM" LED blinks

slowly (1 Hz). In this case the controller configuration is incorrect (↪ section 7.2 "Device configuration" on page 15, ROPEX Application Report). Repeat the calibration after correcting the controller configuration.

9. After the zero point has been successfully calibrated, specify a defined temperature by means of the EtherCAT® protocol (set point) and set the ST bit. The RA bit (control active) is then activated and the "HEAT" LED lights up. The heating and control process can be observed at the actual value output.

The controller is functioning correctly if the temperature (which corresponds to the signal change at the analog output or the actual value in the EtherCAT® protocol) is a regular curve, in other words it must not jump abruptly, fluctuate, or temporarily deviate in the wrong direction. This kind of behavior would indicate that the U_R measurement cable was laid incorrectly.

If an error code is displayed, proceed as described in section 8.19 "Error messages" on page 49.

10. Burn in the heatsealing band (↪ section 7.3 "Replacing and burning in the heatsealing band" on page 17) and run the AUTOCAL function again.

7.4.2 Restart after replacing the heatsealing band

To replace the heatsealing band, proceed as described in section 7.3 "Replacing and burning in the heatsealing band" on page 17.



Always use a heatsealing band with the correct alloy, dimensions, and copper plating in order to avoid malfunctions and overheating.

Continue with section 7.4, steps 3 to 10.

8 Device functions

See also section 6.6 "Wiring diagram (standard)" on page 13.

8.1 LEDs and controls

L/A (green LED) Lit if connection exists to EtherCAT.
Blinking if EtherCAT frames are transmitted.

AUTOCAL (yellow LED) Lit while AUTOCAL process is executing.

OUTPUT (green LED) Indicates pulses in measurement mode. In control mode, luminous intensity is proportional to heating current.

HEAT (yellow LED) Lit during heating phase.


ALARM (red LED) Lit or blinking to indicate fault.

ECAT ERROR (red LED) Lit or blinking to indicate EtherCAT network errors.

ECAT RUN (green LED) Lit as long as there are no communication errors.

BUS POWER (green LED) Lit if internal power supply for EtherCAT interface is OK.

24V... POWER (green LED) Lit if external 24VDC power supply is present.

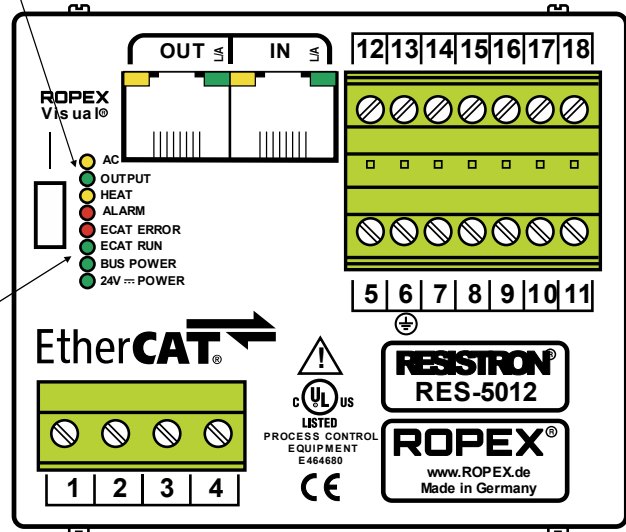

In addition to the functions shown above, the LEDs also indicate various controller operating states. These states are described in detail in the table below:

LED	Blinks slowly (1 Hz)	Blinks fast (4 Hz)	Lit continuously
AUTOCAL (yellow)	RS bit set (reset)	AUTOCAL requested but function blocked (e.g. START active)	AUTOCAL executing
	LED blinks at a different frequency: Supply voltages incorrect (too low)		

LED	Blinks slowly (1 Hz)	Blinks fast (4 Hz)	Lit continuously
HEAT (yellow)	—	START requested but function blocked (e.g. AUTOCAL active, set temperature < 40 °C)	START executing
OUTPUT (green)	In control mode, luminous intensity is proportional to heating current.		
ALARM (red)	Configuration error, no AUTOCAL possible	Controller calibrated incorrectly, run AUTOCAL	Error, ↪ section 8.19
ECAT RUN (green)	Off: Init Blinks green at 2.5 Hz: Pre-Operational Single flash: Safe-Operational		Operational
ECAT ERROR (red)	Off: no EtherCAT® communication error Blinkts at 2.5 Hz: illegal configuration. Master is not able to change status Single flash: local error Double flash: Prozess data watchdog		—
L/A IN, OUT (green)	—	EtherCAT® frames are transmitted	Connection to the EtherCAT® network

8.2 EtherCAT® communication

The following sections only describe controller-specific functions. For general information on the EtherCAT® interface and the system configuration, please refer to the description of your PLC.

The controller can communicate via the EtherCAT® interface provided the 24 VDC supply voltage (terminals 5+7) is present.

If no line voltage is present however (e.g. if it is switched off in order to open a door), error code 901 or 201 (error group 7, no line voltage / sync signal) appears on the controller and the alarm relay is switched. This happens due to the absence of line voltage. The error message can be reset by switching on the line voltage again and setting the RS bit (☞ section 8.5.3 "Reset (RS)" on page 25).

You can easily process the error code that appears if the line voltage is switched off – or suppress switching of the alarm relay – in the PLC program.

8.3 EtherCAT® Slave Information (ESI)

The configuring tools for the EtherCAT® controller interpret the content of the slave information file (ESI) and use this information to create a parameter set for the EtherCAT® controller which controls user data traffic. The ESI file *ROPEX RES-5012 UPT-6012 V1.2.xml* of the RES-5012 contains all essential controller information for the configuration, e.g. the I/O data description, parameter descriptions, error messages etc. The ESI file can be requested by e-mail (support@ropex.de) or downloaded from our website (<https://ropex.de>).

If the controller already has an IP address, the device description file can also be downloaded from the integrated web server.

After linking the required ESI file into the configuring tool, you can select the desired parameter values.

8.4 Communication protocol

The communication protocol consists of 2x16 bit input words and 3x16 bit output words (from the point of view of the controller). This protocol separates the set point and the actual value of the RES-5012 from the status information and the control functions, to simplify decoding by the EtherCAT® master.

Bits 0...7 form the low byte and bits 8...15 the high byte ("INTEL format").

The 2 x 16-bit **input data** contains the set point in word ① and the control functions in word ②:

①	Spare							Set point / AC temperature									
Name:	0	0	0	0	0	0	0										
Bit no.:	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0	

②	Spare					Channel			Spare			Control function				
Name:	0	0	0	0	0	CH2	CH1	CH0	0	0	0	MA	MP	RS	ST	AC
Bit no.:	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

The 3 x 16-bit **output data** contains the actual value in word ①, the status information in word ②, and the error code in word ③:

①	Actual value (signed)															
Name:																
Bit no.:	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

②	Spare				Channel			Status information								
Name:	0	0	0	MU ¹	CH2	CH1	CH0	SA	IA	WA	AA	AG	AL	TE	TO	RA
Bit no.:	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

1. As from firmware version 303

③	Error code															
Name:	0	0	0	0	0	0	A9	A8	A7	A6	A5	A4	A3	A2	A1	A0
Bit no.:	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

①	Start temperature (signed)															
Name:																
Bit no.:	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0

8.5 Input data

The term "input data" refers to the data that is transferred from the EtherCAT® master to the RES-5012. It contains the set point as well as the control functions such as START or AUTOCAL for the RES-5012. These functions are explained in the following.

8.5.1 Automatic zero calibration AUTOCAL (AC)

Owing to the automatic zero calibration (AUTOCAL) function, there is no need to adjust the zero point manually on the controller. This function adjusts the controller to the current and voltage signals present in the system and calibrates it to the value which is predefined in the parameter data (↪ section 8.7.4 "Variable calibration temperature" on page 35). If no parameter data is transferred by the EtherCAT® master, the default value is 20 °C.

Some EtherCAT® masters do not allow the parameter data to be changed during operation. In this case, the calibration temperature cannot be adapted to the actual ambient conditions in the machines.

The calibration temperature can thus be specified by means of the "Set point / AC temperature" input data whenever the zero point is calibrated, provided this is permitted in the parameter data (↪ section 8.7.4 "Variable calibration temperature" on page 35). You can specify it in the 0...+40 °C range. The specified calibration temperature must be entered in the "Set point / AC temperature" input data when the AUTOCAL function is activated (AC bit = 1). This specified value must not be changed until the AUTOCAL function has finished.

If the specified temperature is too high (greater than 40 °C) or if the specified value fluctuates, an error message appears (error codes 115 and 116; ↪ section 8.19 "Error messages" on page 49).

The AUTOCAL request (AC bit = 1) is executed by the controller provided the AUTOCAL function is not blocked. The automatic calibration takes around 10...15 seconds. The heatsealing band is not heated during this process. The yellow LED on the front panel lights up while the AUTOCAL function is executing and the controller shows "AUTOCAL active" (AA bit = 1) in the output data. The actual value output (terminals 17+18) changes to 0...3 °C (corresponds to approx. 0 VDC).

If the temperature of the heatsealing band fluctuates, the AUTOCAL function is executed a maximum of three times. If the function still cannot be executed successfully, an error message appears (↪ section 8.19 "Error messages" on page 49).

The AUTOCAL function should only be activated while the heatsealing band (and the environment, i.e. silicone, PTFE cover, sealing bar etc.) is still cold (base temperature).

Reasons for blocked AUTOCAL function:

1. An AUTOCAL request cannot be accepted until 10 seconds after the controller is switched on. During this time the controller shows "AUTOCAL blocked" (AG bit = 1) in the output data.
2. The AUTOCAL function is not activated if the heatsealing band cools down at a rate of more than 0.1 K/s. If the AC bit is set, the function is automatically executed when the cooling rate falls below the specified value.
3. If the START bit is set (ST bit = 1), the AUTOCAL function is not executed ("HEAT" LED lit).
4. If the RESET bit is set (RS bit = 1), the AUTOCAL function is not executed.
5. The AUTOCAL function cannot be activated if error codes 101...103, 201...203 or 9xx appear as soon as the controller is switched on (↪ section 8.19 "Error messages" on page 49). It also cannot be activated if error codes 201...203 or 9xx appear and the controller has operated correctly at least once since being switched on.

If the AUTOCAL function is blocked (AG bit = 1), an AUTOCAL request (AC bit = 1) causes the "AUTOCAL" LED to blink fast (4 Hz).

8.5.2 Start (ST)

When the START bit is set (ST bit = 1), the controller's internal set / actual comparison is enabled and the heatsealing band is heated to the SET temperature. It remains at this temperature either until the ST bit is reset or until the actual heating time exceeds the preset heating time limit (↪ section 8.7.5 "Heating time limit" on page 35).

The "HEAT" LED on the front panel of the RES-5012 lights up continuously for the duration of the heating time. A start request is not processed as long as the AUTOCAL function is active, a fault is present on the controller, the set point is less than 20 °C higher than the calibration temperature, or the RS bit is set. In this case, the "HEAT" LED blinks.

The heatup process is terminated if the ST bit is reset or if a communication error occurs.

The ST bit is only accepted if the AUTOCAL function is deactivated and there are no faults.

The alarm relay is switched if the ST bit is set while a warning with error code 104...106, 111...114, 211, 302, or 303 is indicated (↪ section 8.19 "Error messages" on page 49). The heating element is not heated.

8.5.3 Reset (RS)

This bit resets the controller if the controller shows a fault.

No AUTOCAL or START requests are accepted as long as the RS bit is set. Until it is reset again, only error codes 201...203, 901, 913 are evaluated and output by the error diagnosis function. The power unit is not activated in this state and no measuring impulses are generated. As a result of this, the actual value is no longer updated. The reset request is not accepted until the RS bit is reset. EtherCAT® communications are not interrupted by a controller reset.

The controller actual value output changes to 0...3 °C (i.e. approximately 0 VDC) and the SA bit is set in order to set the RS bit.

The AUTOCAL function is not canceled if the RS bit is set while it is executing.

The controller performs an internal initialization lasting approximately 500 ms after the RS bit is reset. The next heatsealing process cannot be started until it has finished.

If a Kb contactor is used to deactivate the control loop (↪ section 6.3 "Power supply" on page 10), it must be reliably energized again 200 ms at the latest after the RS bit is reset (note the contactor switching and delay times). If it is energized too late, an error message appears on the controller.

8.5.4 Measurement pause (MP)

No more measuring impulses are generated by the controller as soon as the MP bit is set. Until it is reset again, only error codes 5 and 7 (201...203, 901, 913) are evaluated and output by the error diagnosis function. In addition, the actual value is no longer updated. The last valid value before the MP bit was set is output. As soon as the MP bit is reset, new measuring impulses are generated, all error messages are evaluated, and the actual value is updated again.

The MP bit is only active in measurement mode. The bits ST, RS, and AC take priority.

The bit is suitable for all applications in which the electrical connections of the heatsealing band must be disconnected during normal operation without triggering a fault (e.g. sliding rail contacts).

Unlike the RS bit (RESET), the MP bit does not reset any faults when it is set. The controller is active again as soon as the MP bit is reset, in other words there is no initialization phase.

When the controller is switched on, it does not evaluate the MP bit until the system test (including the functional test of the heating circuit) has been successfully completed. This can take several hundred milliseconds.

8.5.5 Master AUTOCAL (MA)

Setting this control bit starts a calibration as described in section 8.5.1 "Automatic zero calibration AUTOCAL (AC)" on page 24. However, if the Master AUTOCAL function is successful, the heatsealing band resistance which is determined by the controller is also used as a reference value, e.g. after replacing the heatsealing band.

This reference value serves to calculate the deviation from the calibration value for all subsequent calibrations (initiated with the AC bit). This deviation helps you assess aging of the heatsealing band.

The deviation from the calibration value is queried by means of the object 0x4306.

8.5.6 Channel selection (CH0...CH2)

The temperature controller has separate memories for up to eight calibration data records. A calibration data record contains the values determined by the temperature controller during the AUTOCAL function. By storing the calibration data records, you can alternate between different sealing tools without having to run the AUTOCAL function every time the tool is changed. You only need to execute AUTOCAL if you connect a new heatsealing band.

Since different calibration values, AUTOCAL temperatures, and temperature coefficients are stored in the controller for this purpose, the required calibration data record 0...7 can be selected with the three bits CH0...CH2. You can switch to another channel at any time.

This function is useful, for instance, in applications where frequent changes of format are necessary. The tools can then be changed as required in order to handle the different formats. A channel containing the relevant calibration data record is assigned to each tool. Once all tools have been calibrated with a unique channel assignment, they can be changed at any time simply by selecting the appropriate channel.

If the application does not require any format changes, the channel can remain set to 0. In this case, the temperature controller behaves in exactly the same way as older models where different calibration data records are not supported.

It is possible to switch to another channel during the AUTOCAL function; however, the controller continues working with the original channel until the AUTOCAL function has finished. The channel currently being used by the controller is shown in the status information.

8.5.7 Set point

A set point of up to 300 °C or 500 °C is allowed, depending on the selected temperature range (↪ section 8.7.1 "Temperature range and alloy" on page 35). If you attempt to enter a higher set point, it is limited internally to 300 °C or 500 °C.

8.6 Output data

The term "output data" refers to the data that is transferred from the RES-5012 to the EtherCAT® master. It contains the current actual value as well as all important information on the current status of the controller. If a fault is signaled, it can be diagnosed accurately with the help of the error code.

8.6.1 AUTOCAL active (AA)

The AA bit indicates that the AUTOCAL or AUTOCOMP function is executing.

8.6.2 AUTOCAL blocked (AG)

If the AG bit is set, the AUTOCAL function is temporarily blocked. This is the case if "START" is active or the heat-sealing band is still in the cooling phase.

8.6.3 Alarm active (AL)

If the AL bit is set, an alarm has been triggered but not yet reset. The error code provides information on the exact cause (↪ section 8.19 "Error messages" on page 49).

8.6.4 Warning active (WA)

This bit can be set in addition to the AL bit. If the WA bit is set, a warning is output to indicate the current fault. In this case, the alarm relay is not active.

8.6.5 Temperature achieved (TE)

The TE bit is set if the actual temperature exceeds 95% of the set temperature. This status bit is reset again as soon as you exit control mode (ST bit = 0) or a fault is signaled (AL bit = 1).

8.6.6 Temperature OK (TO)

The RES-5012 checks whether the actual temperature is within a settable tolerance band ("OK" window) either side of the set temperature. The high ($\Delta\vartheta_{high}$) and low ($\Delta\vartheta_{low}$) limits of the tolerance band can be changed independently of one another in the parameter data (↪ section 8.7 "Object dictionary" on page 29). The following settings are possible:


1. "Off"

The TO bit is always reset.

2. "Active when Tact = Tset" (factory setting)

The TO bit is set if the actual value is inside the specified temperature tolerance band. If the actual temperature

is outside of the tolerance band, the TO bit is reset (see graph below).

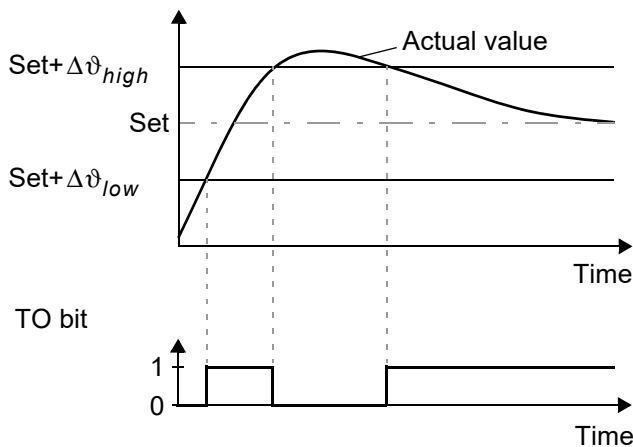


Unlike the "Temperature achieved" status bit (TE bit), the actual temperature is evaluated independently of the control mode.


3. "Active when Tact = Tset" with latch function

A heatsealing cycle starts when the ST bit is set. The TO bit is set when the actual temperature reaches the temperature tolerance band for the first time during a heatsealing cycle. If the actual temperature leaves the tolerance band again while the ST bit is still set, the TO bit is reset (Fig. a.). If the actual temperature does not leave the tolerance band while the ST bit is still set, the TO bit is not reset until the start of the next heatsealing cycle (latch function, Fig. b.). The switching state of the TO bit can thus be queried after the ST bit has been reset and before the start of the next heatsealing cycle.

a.) Temperature *not* ok

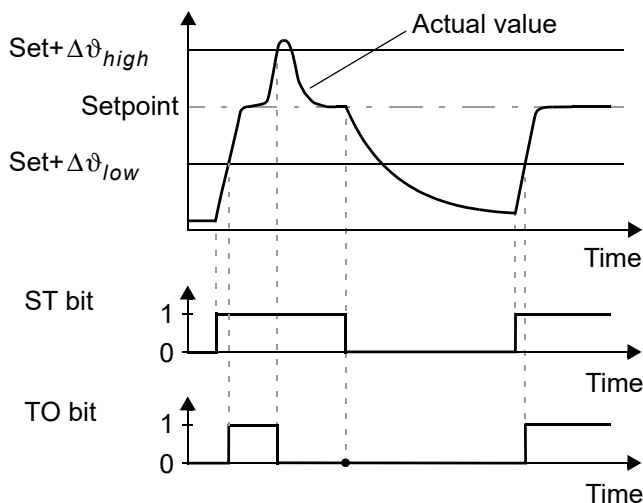

b.) Temperature ok

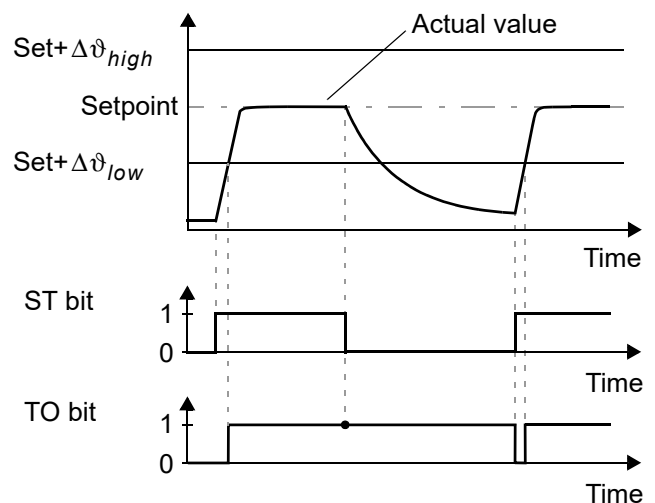

The limits of the tolerance band are adjustable up to a maximum of ± 99 K.

8.6.7 Control active (RA)

The RES-5012 has successfully accepted the "START" request and entered control mode if the RA bit = 1.

8.6.8 Info active (IA)

This bit is reserved for future use and is not currently supported (it is always set to 0).

8.6.9 Standby active (SA)

This bit is active if the RS bit is set. It shows the PLC when the controller has accepted the RS bit or the MP bit, so that these bits can be reset again (handshake).

8.6.10 Measurement interruption (MU)



This bit is available as from firmware version 303.

This bit is active as long as the controller does not perform a temperature measurement during the regulation phase (ST = 1). This can occur when the actual value is larger than the setpoint value (setpoint exceeded). This can be used, for example, to evaluate whether measurement interruptions occur during the heating impulse. This would then be an indication of excessive temperature, which can result in a bad sealing seam.

As soon as a measurement is performed again, the MU bit goes back to 0.

8.6.11 Actual value

All 16 bits of the first word must be interpreted as a signed number (twos complement notation). The resolution is 1 °C. During the calibration procedure or if a fault occurs, the actual value is 0.

8.6.12 Start temperature

The controller returns another 16-bit output word with the last start temperature. This is the temperature which was measured just before the start command was executed (ST bit = 1). This value allows you to evaluate the cooling process. It is only valid during the heating phase (ST bit = 1). Outside of this phase the value "-99 °C" appears, so that it is possible to distinguish between valid and invalid values. The normal value range is between -20 °C and 500 °C.

8.6.13 Error codes

If a fault is signaled (AL bit = 1), you can determine the exact cause with the help of the error code. The error code is contained in the third word at bit positions 0...9 (↪ section 8.19 "Error messages" on page 49).

8.7 Object dictionary

Index: Sub index	Name	Access	Default value ¹	Range	Data type
1000	Device Type	RO	0		UINT32
1001	Error Register	RO	0	0...255	UINT8
1008	Manufacturer Device Name	RO	RES-5012	STRING	UINT8
100A	Manufacturer Software Version	RO	301		UINT32
1018:00	Identity Object	RO	4		UINT8
1018:01	Vendor ID	RO	0x00000576		UINT32
1018:02	Product Code	RO	0xE3		UINT32
1018:03	Revision Number	RO	0x00010001		UINT32
1018:04	Serial Number	RO			UINT32
10F3:00	Diagnosis History	RO	5		UINT8
10F3:01	Maximum Messages	RW	250	1...250	UINT8
10F3:02	Newest Message	RO	0	0, 6...255	UINT8
10F3:03	Newest Acknowledged Message	RW	0	0, 6...255	UINT8
10F3:04	New Messages Available	RO	0	0 (false), 1 (true)	BOOL
10F3:05	Flags	RW	0		UINT32
10F8	Timestamp Object	RO	0		UINT32
1600:00	RxPDO	RO	9		UINT8
1600:01	SubIndex 001	RO	0x20000110		UINT32
1600:02	SubIndex 002	RO	0x20000201		UINT32
1600:03	SubIndex 003	RO	0x20000301		UINT32
1600:04	SubIndex 004	RO	0x20000401		UINT32
1600:05	SubIndex 005	RO	0x20000501		UINT32
1600:06	SubIndex 006	RO	0x20000601		UINT32
1600:07	SubIndex 007	RO	0x20000703		UINT32
1600:08	SubIndex 008	RO	0x20000803		UINT32
1600:09	SubIndex 009	RO	0x20000905		UINT32
1A00:00	TxPDO	RO	14		UINT8
1A00:01	SubIndex 001	RO	0x30000110		UINT32
1A00:02	SubIndex 002	RO	0x30000201		UINT32
1A00:03	SubIndex 003	RO	0x30000301		UINT32
1A00:04	SubIndex 004	RO	0x30000401		UINT32

Index: Sub index	Name	Access	Default value ¹	Range	Data type
1A00:05	SubIndex 005	RO	0x30000501		UINT32
1A00:06	SubIndex 006	RO	0x30000601		UINT32
1A00:07	SubIndex 007	RO	0x30000701		UINT32
1A00:08	SubIndex 008	RO	0x30000801		UINT32
1A00:09	SubIndex 009	RO	0x30000901		UINT32
1A00:0A	SubIndex 010	RO	0x30000A01		UINT32
1A00:0B	SubIndex 011	RO	0x30000B03		UINT32
1A00:0C	SubIndex 012	RO	0x30000C04		UINT32
1A00:0D	SubIndex 013	RO	0x30000D10		UINT32
1A00:0E	SubIndex 014	RO	0x30000E10		UINT32
1C00:00	Sync Manager Communication Type	RO	8		UINT8
1C00:01	SubIndex 001	RO	1		UINT8
1C00:02	SubIndex 002	RO	2		UINT8
1C00:03	SubIndex 003	RO	3		UINT8
1C00:04	SubIndex 004	RO	4		UINT8
1C00:05	SubIndex 005	RO	0		UINT8
1C00:06	SubIndex 006	RO	0		UINT8
1C00:07	SubIndex 007	RO	0		UINT8
1C00:08	SubIndex 008	RO	0		UINT8
1C12:00	SyncManager 2 PDO Assignment	RO	1		UINT8
1C12:01	SubIndex 001	RO	0x1600		UINT16
1C13:00	SyncManager 3 PDO Assignment	RO	1		UINT8
1C13:01	SubIndex 001	RO	0x1A00		UINT16
2000:00	Outputs	RO	9		UINT8
2000:01	Set point	RW	0	0...500	UINT16
2000:02	AC	RW	0	0 (off), 1 (on)	BOOL
2000:03	ST	RW	0	0 (off), 1 (on)	BOOL
2000:04	RS	RW	0	0 (off) ,1 (on)	BOOL
2000:05	MP	RW	0	0 (off) ,1 (on)	BOOL
2000:06	MA	RW	0	0 (off) ,1 (on)	BOOL
2000:07	Reserved_1	RW	0	0	BIT3
2000:08	Channel in	RW	0	0...7	BIT3

Index: Sub index	Name	Access	Default value ¹	Range	Data type
2000:09	Reserved_2	RW	0	0	BIT5
3000:00	Inputs	RO	14		UINT8
3000:01	Actual temperature	RO	0	-99...999	INT16
3000:02	RA	RO	0	0 (off), 1 (on)	BOOL
3000:03	TO	RO	0	0 (off), 1 (on)	BOOL
3000:04	TE	RO	0	0 (off), 1 (on)	BOOL
3000:05	AL	RO	0	0 (off), 1 (on)	BOOL
3000:06	AG	RO	0	0 (off), 1 (on)	BOOL
3000:07	AA	RO	0	0 (off), 1 (on)	BOOL
3000:08	WA	RO	0	0 (off), 1 (on)	BOOL
3000:09	IA	RO	0	0 (off), 1 (on)	BOOL
3000:0A	SA	RO	0	0 (off), 1 (on)	BOOL
3000:0B	Channel out	RO	0	0...7	BIT3
3000:0C	MU	RO	0	0	BOOL
3000:0D	Reserved_3	RO	0	0	BIT3
3000:0E	Alarm code	RO	0	0...999	UINT16
3000:0F	Start temperature	RO	-99	-99...999	INT16
4000	Alloy / Temperature range	RW	10	0, 1, 4, 5, 8, 9,10, 11 (↯ 8.7.1)	UINT8
4001	Lower temperature limit	RW	10K	3...99 K	UINT8
4002	Upper temperature limit	RW	10K	3...99 K	UINT8
4003:00	Calibration temperature, -1 -> variable	RO	8		UINT8
4003:01	SubIndex 001	RW	20 °C	-1, 0...40 °C	INT8
4003:02	SubIndex 002	RW	20 °C	-1, 0...40 °C	INT8
4003:03	SubIndex 003	RW	20 °C	-1, 0...40 °C	INT8
4003:04	SubIndex 004	RW	20 °C	-1, 0...40 °C	INT8
4003:05	SubIndex 005	RW	20 °C	-1, 0...40 °C	INT8
4003:06	SubIndex 006	RW	20 °C	-1, 0...40 °C	INT8
4003:07	SubIndex 007	RW	20 °C	-1, 0...40 °C	INT8
4003:08	SubIndex 008	RW	20 °C	-1, 0...40 °C	INT8
4004	Heating time limit (100 ms units)	RW	0	0...999 (0...99.9 s)	UINT16

Index: Sub index	Name	Access	Default value ¹	Range	Data type
4005	Diagnosis	RW	on	off (0), on (1)	UINT8
4006	Measurement impulse duration	RW	17	17...30 (1.7...3.0 ms)	UINT8
4007	Data format	RW	Little Endian (Intel)	Little Endian (Intel) (0), Big Endian (Moto- rola) (1)	UINT8
400A:00	Temperature coefficient	RO	8		UINT8
400A:01	SubIndex 001	RW	1100ppm/K	400...4000ppm/K	UINT16
400A:02	SubIndex 002	RW	1100ppm/K	400...4000ppm/K	UINT16
400A:03	SubIndex 003	RW	1100ppm/K	400...4000ppm/K	UINT16
400A:04	SubIndex 004	RW	1100ppm/K	400...4000ppm/K	UINT16
400A:05	SubIndex 005	RW	1100ppm/K	400...4000ppm/K	UINT16
400A:06	SubIndex 006	RW	1100ppm/K	400...4000ppm/K	UINT16
400A:07	SubIndex 007	RW	1100ppm/K	400...4000ppm/K	UINT16
400A:08	SubIndex 008	RW	1100ppm/K	400...4000ppm/K	UINT16
400B	Temperature range	RW	300 °C	200 °C (0), 300 °C (1), 400 °C (2), 500 °C (3)	UINT8
400C	Maximum temperature	RW	300 °C	200...500 °C	UINT16
400D	Temperature diagnosis	RW	off	off (0), on (1)	UINT8
400E	Temperature diagnosis delay (100 ms units)	RW	0s	0...99 (0...9.9 s)	UINT8
400F	Heating up time limit (100 ms units)	RW	0s	0...999 (0...99.9 s)	UINT16
4010	AUTOCOMP	RW	off	off (0), on (1), auto- matic (2)	UINT8
4011	Temperature-OK-bit (output 1)	RW	active, if ACT=SET	off (0), active, if ACT=SET (1) active, if ACT=SET with latch (2)	UINT8
4012	Hold mode	RW	off	off (0), on (1), 2 seconds (2)	UINT8
4300	System date	RW			UINT32
4301	System time	RW			UINT32

Index: Sub index	Name	Access	Default value ¹	Range	Data type
4302	Operating hours	RO	0	0...999999999 (0...99999999.9h)	UINT32
4303	Total cycle counter	RO	0	0...999999999	UINT32
4304	Total cycle counter, clearable	RW	0	0...999999999	UINT32
4305:00	Cycle counter per channel, clearable	RO	8		UINT8
4305:01	SubIndex 001	RW	0	0...999999999	UINT32
4305:02	SubIndex 002	RW	0	0...999999999	UINT32
4305:03	SubIndex 003	RW	0	0...999999999	UINT32
4305:04	SubIndex 004	RW	0	0...999999999	UINT32
4305:05	SubIndex 005	RW	0	0...999999999	UINT32
4305:06	SubIndex 006	RW	0	0...999999999	UINT32
4305:07	SubIndex 007	RW	0	0...999999999	UINT32
4305:08	SubIndex 008	RW	0	0...999999999	UINT32
4306:00	Calibration deviation	RO			UINT8
4305:01	SubIndex 001	RW	0	-10000...10000 (-100.00...100.00%)	INT16
4305:02	SubIndex 002	RW	0	-10000...10000 (-100.00...100.00%)	INT16
4305:03	SubIndex 003	RW	0	-10000...10000 (-100.00...100.00%)	INT16
4305:04	SubIndex 004	RW	0	-10000...10000 (-100.00...100.00%)	INT16
4305:05	SubIndex 005	RW	0	-10000...10000 (-100.00...100.00%)	INT16
4305:06	SubIndex 006	RW	0	-10000...10000 (-100.00...100.00%)	INT16
4305:07	SubIndex 007	RW	0	-10000...10000 (-100.00...100.00%)	INT16
4305:08	SubIndex 008	RW	0	-10000...10000 (-100.00...100.00%)	INT16
4307	Passes through current transformer	RW	1	1...9	UINT8
4308:00	Calibration resistance	RO	8		UINT8
4308:01	SubIndex 001	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4308:02	SubIndex 002	RO	0	0...65535 (0...6553.5mΩ)	UINT16

Index: Sub index	Name	Access	Default value ¹	Range	Data type
4308:03	SubIndex 003	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4308:04	SubIndex 004	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4308:05	SubIndex 005	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4308:06	SubIndex 006	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4308:07	SubIndex 007	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4308:08	SubIndex 008	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4309:00	Initial calibration resistance	RO	8		UINT8
4309:01	SubIndex 001	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4309:02	SubIndex 002	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4309:03	SubIndex 003	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4309:04	SubIndex 005	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4309:05	SubIndex 005	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4309:06	SubIndex 006	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4309:07	SubIndex 007	RO	0	0...65535 (0...6553.5mΩ)	UINT16
4309:08	SubIndex 008	RO	0	0...65535 (0...6553.5mΩ)	UINT16

1. The default value is stored in the ESI file.

8.7.1 Temperature range and alloy

This parameter determines both the temperature range and the heatsealing band alloy. You can overwrite the setting of the rotary coding switch (↪ section 7.2.2 "Configuration of the rotary coding switch for the temperature range and alloy" on page 16) by changing the default value (10).

Value	Temperature range	Alloy
0	300 °C	TCR = 1100 ppm/K, e.g. Alloy 20
1	300 °C	TCR = 780 ppm/K, e.g. Alloy L
4	500 °C	TCR = 1100 ppm/K, e.g. Alloy 20
5	500 °C	TCR = 780 ppm/K, e.g. Alloy L
8	300 °C	TCR = 3500 ppm/K, e.g. NOREX
9	PC setting (visualization software)	PC setting (visualization software)
10	Rotary coding switch setting	Rotary coding switch setting
11	Variable: Object 0x400B is used	Variable: Object 0x400A is used

You must always execute the AUTOCAL function after changing the "Temperature range / alloy", "Temperature range", or "Temperature coefficient" parameter.

8.7.2 Low temperature OK threshold

Low threshold value for the "OK" window.

Refer to section 8.6.6 "Temperature OK (TO)" on page 26 and section 8.7.9 "Temperature diagnosis" on page 38.

8.7.3 High temperature OK threshold

High threshold value for the "OK" window.

Refer to section 8.6.6 "Temperature OK (TO)" on page 26 and section 8.7.9 "Temperature diagnosis" on page 38.

8.7.4 Variable calibration temperature

The calibration temperature is set to 20 °C by default. You can change it to another value between 0 °C and 40 °C in order to adapt it to the temperature of the cold heatsealing band.

Some EtherCAT® masters do not allow the parameter data to be changed during operation. In this case, the calibration temperature cannot be adapted to the actual ambient conditions in the machines.

The calibration temperature can thus be enabled for setting by means of the input data by specifying the value "-1" in the parameter data. The calibration temperature can then be specified via the "Set point / AC temperature" input data (↪ section 8.5.1 "Automatic zero calibration AUTOCAL (AC)" on page 24).

After a change of the calibration temperature, the AUTOCAL function must be performed.

8.7.5 Heating time limit

The heating time limit provides additional protection against unwanted continuous heating. The controller automatically deactivates the heating impulse after the set heating time limit has elapsed if the ST bit remains set for longer than the time specified with this limit. The ST bit must be reset before the controller can be started up again. The heating time limit is deactivated by default (0) but can be set to any value between 0 s and 99.9 s (0 and 999).

8.7.6 Measuring impulse duration

The length of the measuring impulses generated by the controller can be set with this parameter. It may be necessary to set a measuring impulse longer than the default 1.7 ms for certain applications.

8.7.7 Data format

This parameter specifies the order of the bytes ("Little Endian (Intel)" or "Big Endian (Motorola)") in the cyclic data; this setting applies to both input and output data (↪ section 8.4 "Communication protocol" on page 23).



We recommend selecting "Big Endian (Motorola)" for Siemens PLCs.

8.7.8 Automatic phase angle compensation (AUTOCOMP)

It may be necessary to compensate the phase angle displacement between the U_R and I_R measuring signals for specific heatsealing applications (↪ ROPEX Application Report). The AUTOCOMP function is provided for this purpose. The following settings are possible:


1. **"Off"** (factory setting)

The AUTOCOMP function is switched off.

2. **"On"**

The AUTOCOMP function is executed whenever the AUTOCAL function (↪ section 8.5.1 "Automatic zero calibration AUTOCAL (AC)" on page 24) is executed twice in quick succession. The interval between the end of the first AUTOCAL function and the start of the second AUTOCAL must be shorter than 2.0 seconds. The second AUTOCAL function only takes around 2.0 seconds and includes the AUTOCOMP function.


If the interval between the two AUTOCAL functions is longer than 2.0 seconds, AUTOCAL is executed normally again the second time.

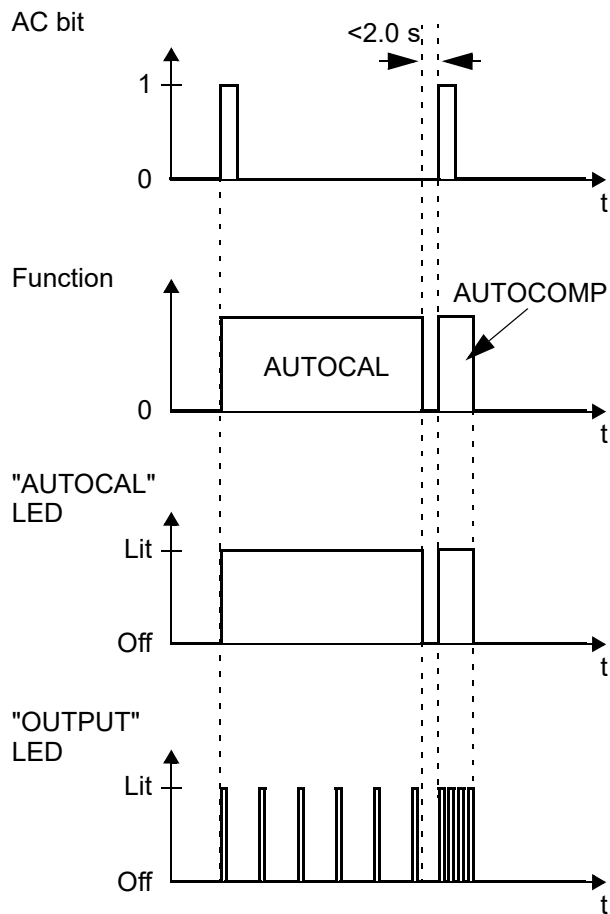

The "OUTPUT" LED blinks several times when the AUTOCOMP function is executed and the actual value output (terminals 17+18) changes to 0...3 °C (corresponds to approx. 0 VDC).

3. "AUTO"

This setting causes the AUTOCOMP function to be automatically activated after the AUTOCAL function has been successfully executed.

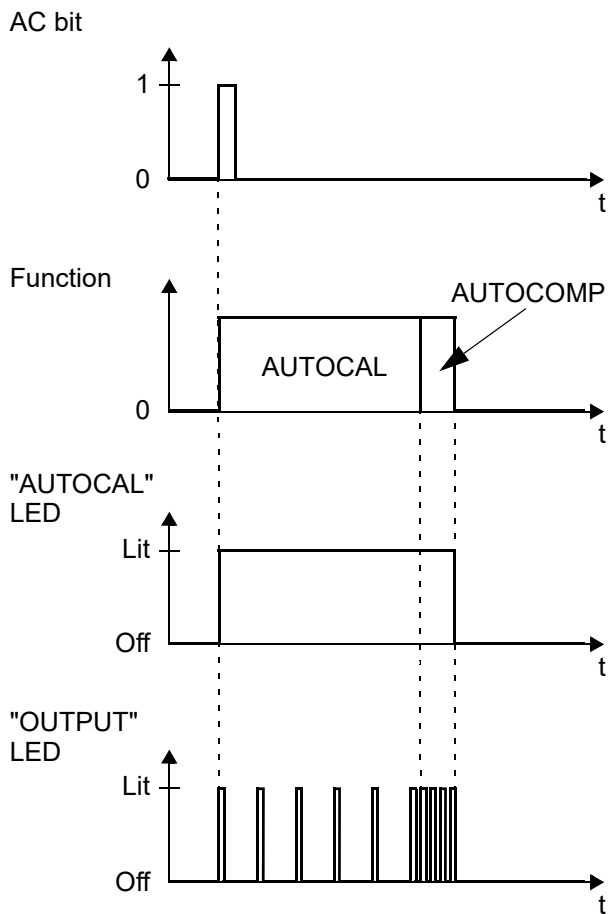


The "OUTPUT" LED blinks several times when the AUTOCOMP function is executed and the actual value output (terminals 17+18) changes to 0...3 °C (corresponds to approx. 0 VDC).

The AUTOCOMP function must be activated in the parameter data (↪ section 8.7 "Object dictionary" on page 29) (default setting: AUTOCOMP off).

8.7.9 Temperature diagnosis

An additional temperature diagnosis can be activated in the parameter data (ESI file). The RES-5012 checks whether the actual temperature is within a settable tolerance band ("OK" window) either side of the set temperature. The high ($\Delta\vartheta_{high}$) and low ($\Delta\vartheta_{low}$) tolerance limits are the same as for the "Temperature OK" function (TO bit ↪ section 8.6.6 "Temperature OK (TO)" on page 26). The limits are set to -10 K and +10 K by default. If the ACTUAL temperature is inside the specified tolerance band when the START signal is activated, the temperature diagnosis is activated as well. If the ACTUAL temperature leaves the tolerance band, the corresponding error code (307, 308) appears and the alarm relay is switched (↪ section 8.19 "Error messages" on page 49).

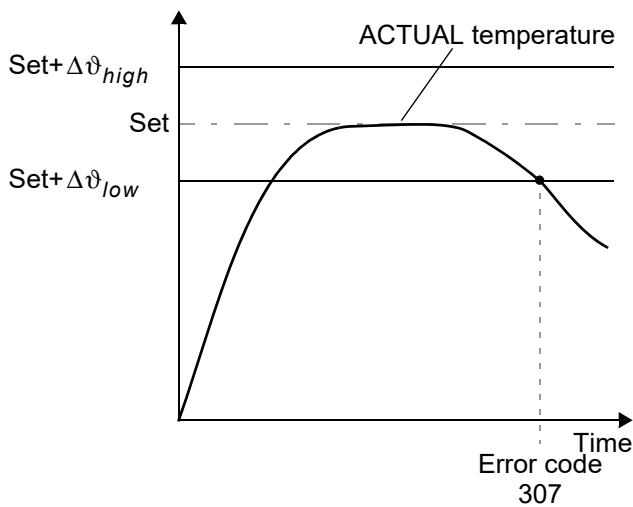

If the temperature diagnosis is not activated by the time the START signal is deactivated (i.e. if the ACTUAL temperature does not exceed the high or low tolerance band limit), the corresponding error code (309, 310) appears and the alarm relay is switched.


An additional delay time (0..9.9 s) can be set in the parameter data (ESI file). The first time the low tolerance limit is exceeded, the temperature diagnosis is not activated until the configured delay time has elapsed. The temperature diagnosis function can thus be selectively deactivated, e.g. if the temperature drops temporarily owing to the closure of the sealing jaws.

The high and low tolerance limits cannot be set in the ROPEX visualization software. The same limits apply as with the TO bit. They can only be set in the parameter data (↪ section 8.7 "Object dictionary" on page 29).

8.7.10 Heatup timeout

An additional heatup timeout can be activated in the parameter data (ESI file).

This timeout starts when the ST bit is set. The RES-5012 then monitors the time required for the ACTUAL temperature to reach 95% of the SET temperature. If this time is longer than the configured time, the corresponding error code (304) appears and the alarm relay is switched (↪ section 8.19 "Error messages" on page 49).

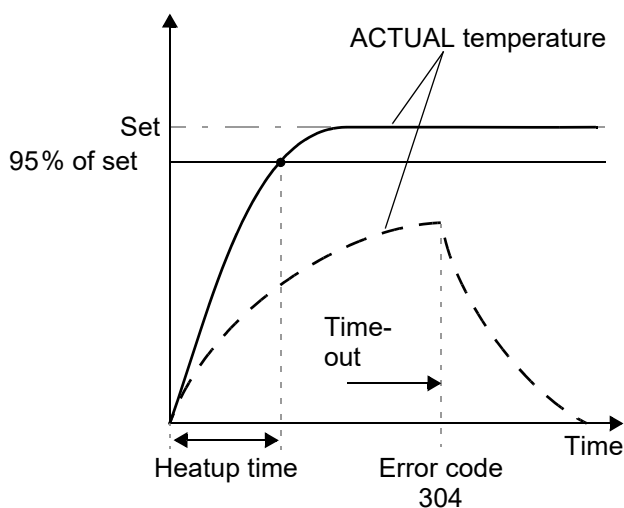

The "Heatup timeout" function must be enabled for use in the parameter data (↪ section 8.7 "Object dictionary" on page 29) (default setting: heatup timeout off).

8.7.11 Hold mode

The ACTUAL temperature output via the EtherCAT® protocol can be configured in the parameter data (ESI file) as follows:

1. **"Off" (factory setting)**

The ACTUAL temperature is always output in real time.

2. **"On"**


The ACTUAL temperature that was valid at the end of the last heatsealing phase is output. When the controller is switched on, the real ACTUAL temperature is indicated up until the end of the first heating phase.

3. **"2 sec."**

This setting causes the current ACTUAL temperature to be output for an additional 2 seconds by means of the EtherCAT® protocol at the end of a heatsealing phase. The ACTUAL temperature is then output again in real time until the end of the next heatsealing phase.

Hold mode only applies to the ACTUAL temperature which is output via the EtherCAT® protocol and the digital temperature display in the ROPEX visualization software. It has no effect on the ACTUAL temperature that appears at the controller's analog output or is plotted in the graphics window of the ROPEX visualization software. The various hold modes are shown below:

ST bit

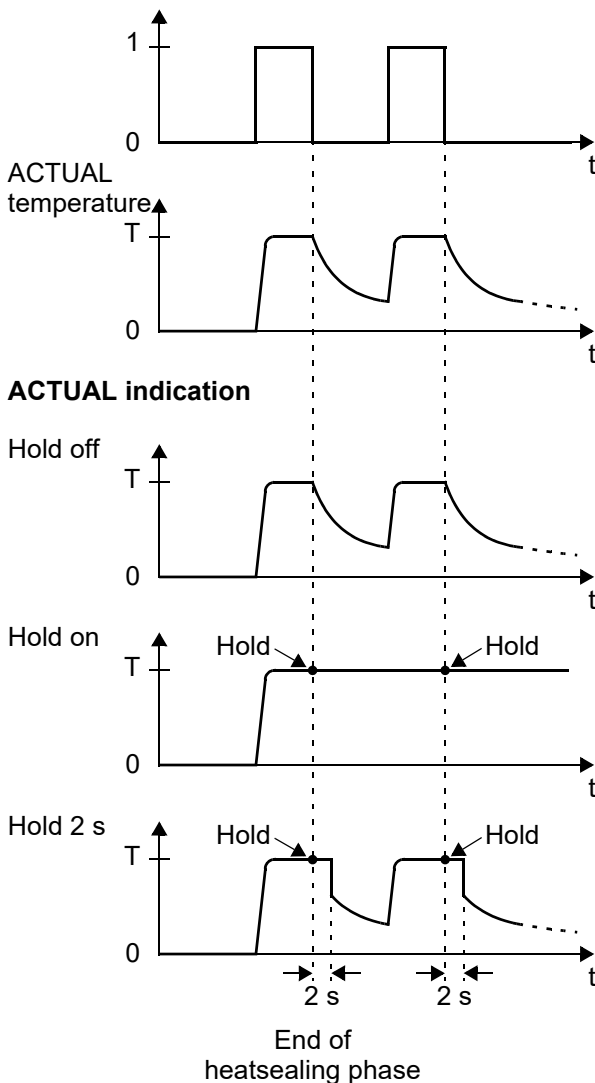

The "Hold mode" function must be activated in the parameter data (↪ section 8.7 "Object dictionary" on page 29) (default setting: hold mode off).

8.8 Integrated web server

The integrated web server enables quick and easy access to status information and parameter values of the temperature controller via the existing Ethernet connection. The device protocol can additionally be read out and displayed. A graph showing the last 5 seconds of a heating impulse allows a rapid qualitative evaluation of the controlled system.


The latest version of the operating instructions can be downloaded from the ROPEX website by clicking on the picture of the device on any page. To make sure this latest version is always available in any selectable language, the instructions are not stored in the device; you must therefore have an Internet connection in order to access the operating instructions.

You can go direct to the official ROPEX website by clicking on the ROPEX logo in the top right-hand corner.

The web server uses JavaScript and has been successfully tested with Internet Explorer 9, 10, and 11 as well as with Microsoft Edge. It also works with the latest version of the Safari and Firefox browsers.

8.8.1 Home page

This page contains general product information under "Device Information", for instance the product name, serial number, firmware version, MAC address, and real-time Ethernet protocol. You can also download the correct device description file for your product here (↪ section 8.3 "EtherCAT® Slave Information (ESI)" on page 22). No Internet connection is necessary to do this because the file is already stored in the device's internal memory.

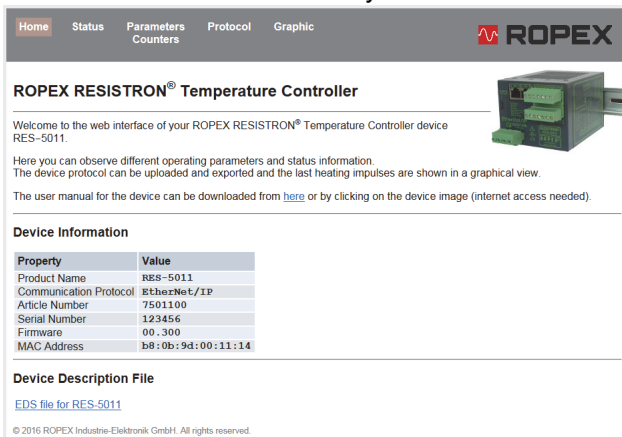

The screenshot shows the web interface for the ROPEX RESISTRON Temperature Controller. At the top, there is a navigation menu with 'Home', 'Status', 'Parameters Counters', 'Protocol', and 'Graphic'. The ROPEX logo is in the top right. The main heading is 'ROPEX RESISTRON® Temperature Controller'. Below this, there is a welcome message and a small image of the device. A 'Device Information' table is displayed, followed by a 'Device Description File' section with a link to the EDS file.


Property	Value
Product Name	RES-5011
Communication Protocol	EtherNet/IP
Article Number	7501100
Serial Number	123456
Firmware	00.300
MAC Address	b8:0b:9d:00:11:14

8.8.2 Status page

This page provides an overview of the current controller status.

"Online" indicates whether a connection has been set up to the PLC.

The inputs (↩ section 8.5 "Input data" on page 23) are shown in the left-hand column, the outputs (↩ section 8.6 "Output data" on page 26) in the middle column, and the current status of all device LEDs (↩ section 8.1 "LEDs and controls" on page 20) in the right-hand column.

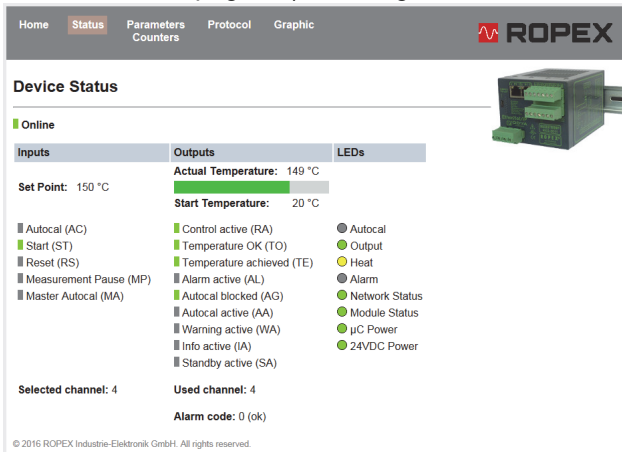


8.8.3 Parameters / Counters page

This page shows all parameter values received by the temperature controller from the EtherCAT® master. If the parameters have been changed using acyclic services, these changes are also indicated here.

For the meanings of the parameter data, refer to section 8.7 "Object dictionary" on page 29.

Under "Counters" you see a list of all cycle and operating hours counters, which are useful for statistical purposes.

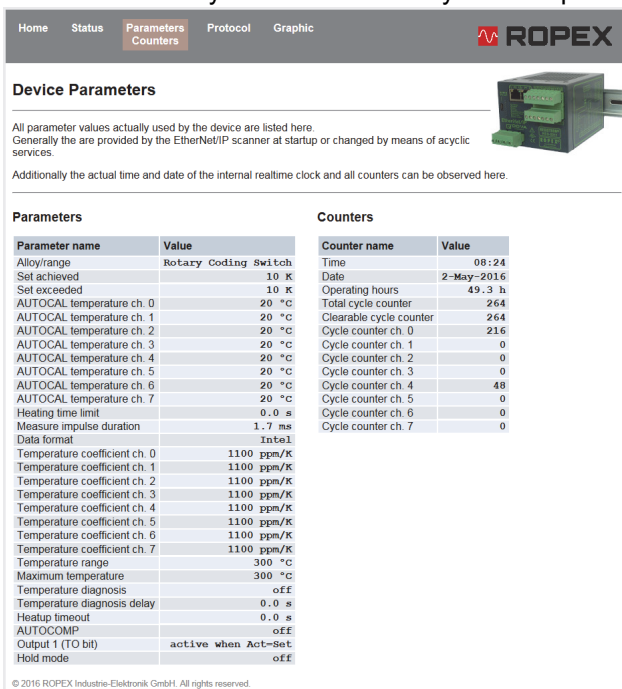

Parameter name	Value	Counter name	Value
Alloy/range	Rotary Coding Switch	Time	08:24
Self achieved	10 K	Date	2-May-2016
Set exceeded	10 K	Operating hours	49.3 h
AUTOCAL temperature ch. 0	20 °C	Total cycle counter	264
AUTOCAL temperature ch. 1	20 °C	Clearable cycle counter	264
AUTOCAL temperature ch. 2	20 °C	Cycle counter ch. 0	216
AUTOCAL temperature ch. 3	20 °C	Cycle counter ch. 1	0
AUTOCAL temperature ch. 4	20 °C	Cycle counter ch. 2	0
AUTOCAL temperature ch. 5	20 °C	Cycle counter ch. 3	0
AUTOCAL temperature ch. 6	20 °C	Cycle counter ch. 4	48
AUTOCAL temperature ch. 7	20 °C	Cycle counter ch. 5	0
Heating time limit	0.0 s	Cycle counter ch. 6	0
Measure impulse duration	1.7 ms	Cycle counter ch. 7	0
Data format	Intel		
Temperature coefficient ch. 0	1100 ppm/K		
Temperature coefficient ch. 1	1100 ppm/K		
Temperature coefficient ch. 2	1100 ppm/K		
Temperature coefficient ch. 3	1100 ppm/K		
Temperature coefficient ch. 4	1100 ppm/K		
Temperature coefficient ch. 5	1100 ppm/K		
Temperature coefficient ch. 6	1100 ppm/K		
Temperature coefficient ch. 7	1100 ppm/K		
Temperature range	300 °C		
Maximum temperature	300 °C		
Temperature diagnosis	off		
Temperature diagnosis delay	0.0 s		
Heatup timeout	0.0 s		
AUTOCOMP	off		
Output 1 (TO bit)	active when Act=Set		
Hold mode	off		


8.8.4 Protocol page

You can download and display the device protocol for the temperature controller on this page. You see the overall size of the protocol ("Total event entries") as well as the upload progress. All entries appear in the form of a table. A timestamp (generated by the built-in clock), the operating hours and cycle counters, and the channel selected at the time are shown for each entry.

In addition to errors, the protocol also contains entries of general interest such as "Clock set" or the AUTOCAL function. An error code provides information on the cause of all events in the protocol. The error codes are

described in detail in section 8.19 "Error messages" on page 49. Each error code is explained in a tooltip when you hover over it briefly.

The data can also be exported to a CSV file to enable further processing in another software program. By clicking on the appropriate button you can select a comma separated format or a semicolon separated format.

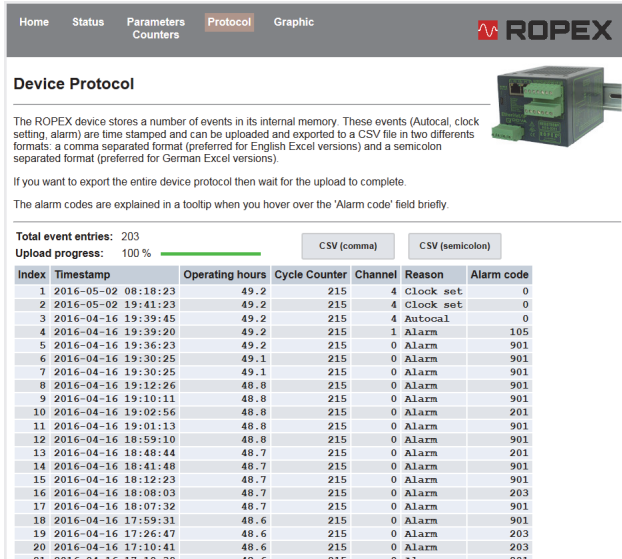

Device Protocol

The ROPEX device stores a number of events in its internal memory. These events (Autoclock setting, alarm) are time stamped and can be uploaded and exported to a CSV file in two different formats: a comma separated format (preferred for English Excel versions) and a semicolon separated format (preferred for German Excel versions).

If you want to export the entire device protocol then wait for the upload to complete.

The alarm codes are explained in a tooltip when you hover over the 'Alarm code' field briefly.

Total event entries: 203
Upload progress: 100 %

CSV (comma) CSV (semicolon)

Index	Timestamp	Operating hours	Cycle Counter	Channel	Reason	Alarm code
1	2016-05-02 08:18:23	49.2	215	4	Clock set	0
2	2016-05-02 19:41:23	49.2	215	4	Clock set	0
3	2016-04-16 19:39:45	49.2	215	4	Autoclock	0
4	2016-04-16 19:39:20	49.2	215	1	Alarm	105
5	2016-04-16 19:36:23	49.2	215	0	Alarm	901
6	2016-04-16 19:30:25	49.1	215	0	Alarm	901
7	2016-04-16 19:30:25	49.1	215	0	Alarm	901
8	2016-04-16 19:12:26	48.8	215	0	Alarm	901
9	2016-04-16 19:10:11	48.8	215	0	Alarm	901
10	2016-04-16 19:09:56	48.8	215	0	Alarm	201
11	2016-04-16 19:01:13	48.8	215	0	Alarm	901
12	2016-04-16 18:59:10	48.8	215	0	Alarm	901
13	2016-04-16 18:48:44	48.7	215	0	Alarm	201
14	2016-04-16 18:41:48	48.7	215	0	Alarm	901
15	2016-04-16 18:12:23	48.7	215	0	Alarm	901
16	2016-04-16 18:08:03	48.7	215	0	Alarm	203
17	2016-04-16 18:07:32	48.7	215	0	Alarm	901
18	2016-04-16 17:59:31	48.6	215	0	Alarm	901
19	2016-04-16 17:26:47	48.6	215	0	Alarm	203
20	2016-04-16 17:10:41	48.6	215	0	Alarm	203
21	2016-04-16 17:10:38	48.6	215	0	Alarm	201

The download may take a few seconds, depending on the number of entries which are stored here. The newest events appear at the top of the list.


If any new events occur while this page is displayed, you do not see them until you refresh the list by clicking on the "Protocol" menu again.

8.8.5 Graphic page

The temperature controller has an internal memory which can store temperature curves over a period of up to 5 seconds. This memory is automatically filled when the ST bit is set. You can display or export the memory contents on the Graphic page.

By clicking on "Refresh", you cause the graphic data to be downloaded from the memory of the temperature controller and displayed again.

"Clear" clears all data from the memory (disconnecting the 24 VDC supply voltage has the same effect).

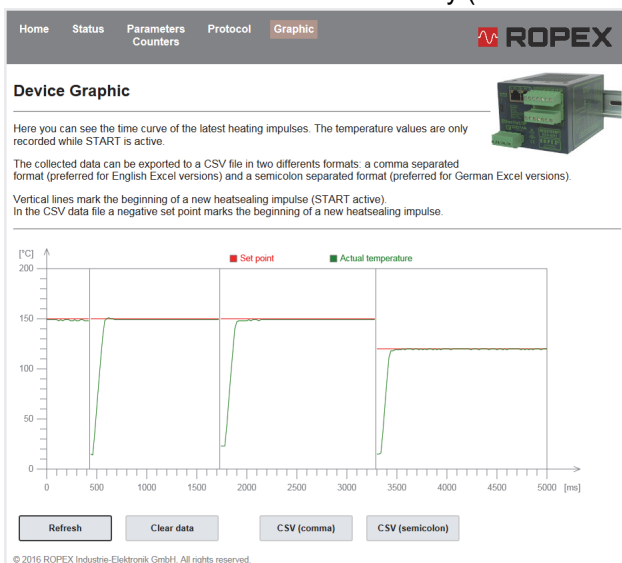

Device Graphic

Here you can see the time curve of the latest heating impulses. The temperature values are only recorded while START is active.

The collected data can be exported to a CSV file in two different formats: a comma separated format (preferred for English Excel versions) and a semicolon separated format (preferred for German Excel versions).

Vertical lines mark the beginning of a new heatsealing impulse (START active).
In the CSV data file a negative set point marks the beginning of a new heatsealing impulse.

Refresh Clear data CSV (comma) CSV (semicolon)

© 2016 ROPEX Industrie-Elektronik GmbH. All rights reserved.

The vertical lines mark the beginning of a new heatsealing impulse (ST bit set). A negative set point indicates the start of a new impulse in the exported data. Cooling processes are not normally visible because they take place when the ST bit is reset.

8.8.6 Calibration page


 This page is first available as from firmware version 303.

The temperature controller stores the absolute calibration resistance of each channel (Calibration resistance ch. 0...7) with an resolution of 0.1 mΩ.

The calculation of the respective calibration resistance is done at the end of the AUTOCAL function (↪ section 8.5.1 "Automatic zero calibration AUTOCAL (AC)" on page 24).

The initial calibration resistances (Initial calibration resistance ch. 0...7) are calculated if the Master-AUTOCAL function is executed (↪ section 8.5.5 "Master AUTOCAL (MA)" on page 25).

These initial calibration resistances are the basis for the calculation of the calibration deviation. Each execution of the AUTOCAL function will calculate both, the absolute calibration resistance and likewise the percentual calibration deviation towards the initial calibration resistance.

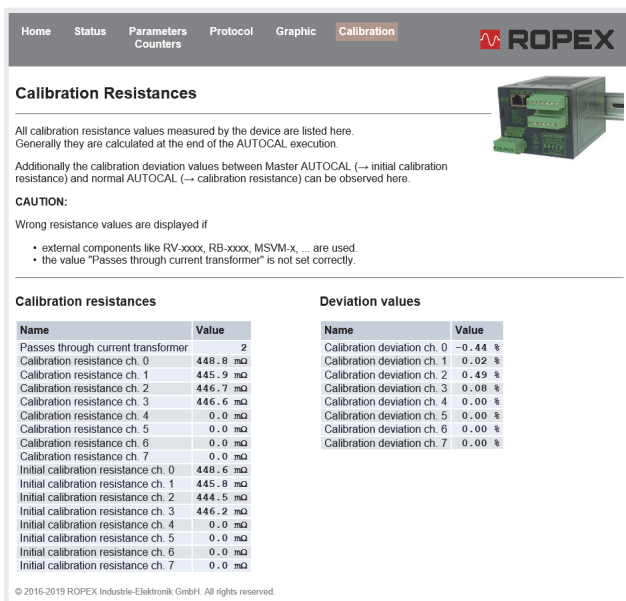


The screenshot shows the 'Calibration' page in the ROPEX interface. It includes a navigation bar with 'Home', 'Status', 'Parameters', 'Protocol', 'Graphic', and 'Calibration'. The main content area is titled 'Calibration Resistances' and contains text explaining that calibration resistance values are measured by the device and calculated at the end of the AUTOCAL execution. It also mentions that calibration deviation values between Master AUTOCAL and normal AUTOCAL can be observed. A 'CAUTION' section notes that wrong resistance values are displayed if external components like RV-xxxx, RB-xxxx, MSVM-x... are used or if the 'Passes through current transformer' value is not set correctly. Below this, there are two tables: 'Calibration resistances' and 'Deviation values'.

Calibration resistances		Deviation values	
Name	Value	Name	Value
Passes through current transformer	2	Calibration deviation ch. 0	-0.44 %
Calibration resistance ch. 0	448.8 mΩ	Calibration deviation ch. 1	0.02 %
Calibration resistance ch. 1	445.9 mΩ	Calibration deviation ch. 2	0.49 %
Calibration resistance ch. 2	446.7 mΩ	Calibration deviation ch. 3	0.08 %
Calibration resistance ch. 3	446.6 mΩ	Calibration deviation ch. 4	0.00 %
Calibration resistance ch. 4	0.0 mΩ	Calibration deviation ch. 5	0.00 %
Calibration resistance ch. 5	0.0 mΩ	Calibration deviation ch. 6	0.00 %
Calibration resistance ch. 6	0.0 mΩ	Calibration deviation ch. 7	0.00 %
Calibration resistance ch. 7	0.0 mΩ		
Initial calibration resistance ch. 0	448.6 mΩ		
Initial calibration resistance ch. 1	445.8 mΩ		
Initial calibration resistance ch. 2	444.5 mΩ		
Initial calibration resistance ch. 3	446.2 mΩ		
Initial calibration resistance ch. 4	0.0 mΩ		
Initial calibration resistance ch. 5	0.0 mΩ		
Initial calibration resistance ch. 6	0.0 mΩ		
Initial calibration resistance ch. 7	0.0 mΩ		

© 2016-2019 ROPEX Industrie-Elektronik GmbH. All rights reserved.

These values are displayed on the Calibration page.

Additionally the actual value of „passes through current transformer“ are displayed. This value can be read or written by means of acyclic services. Set this value to the real wire passes through the current transformer for that the absolute resistance values can be calculated correctly. This value has no influence on the calculation of the percentual calibration deviation.

 The calculation of the absolute resistance values is liable to variation and imprecision due to tolerances in production, to application dimensioning, to quality of cabling, to fluctuations in the power supply, etc.

8.9 Undervoltage detection

Trouble-free operation of the temperature controller is guaranteed within the line voltage and 24 VDC supply voltage tolerances specified in section 10 "Technical data" on page 56.


If the 24 VDC supply voltage drops below the permitted lower limit, the controller is switched to standby mode. No more heatsealing processes take place and no more measuring impulses are generated. Normal operation is resumed when the input voltage returns to the specified tolerance range again.

Standby mode is indicated by 0...3 °C (i.e. approx. 0 V) at the analogue output. In addition, the SA bit is set in the status word for the cyclic output data.

! Trouble-free operation of the controller is only guaranteed within the specified tolerance range of the input voltage. An external voltage monitor must be connected to prevent low line or 24 VDC supply voltage from resulting in defective heatseals.

8.10 Temperature meter (actual value output)



The RES-5012 supplies an analog 0...10 VDC signal, which is proportional to the real ACTUAL temperature, at terminals 17+18.

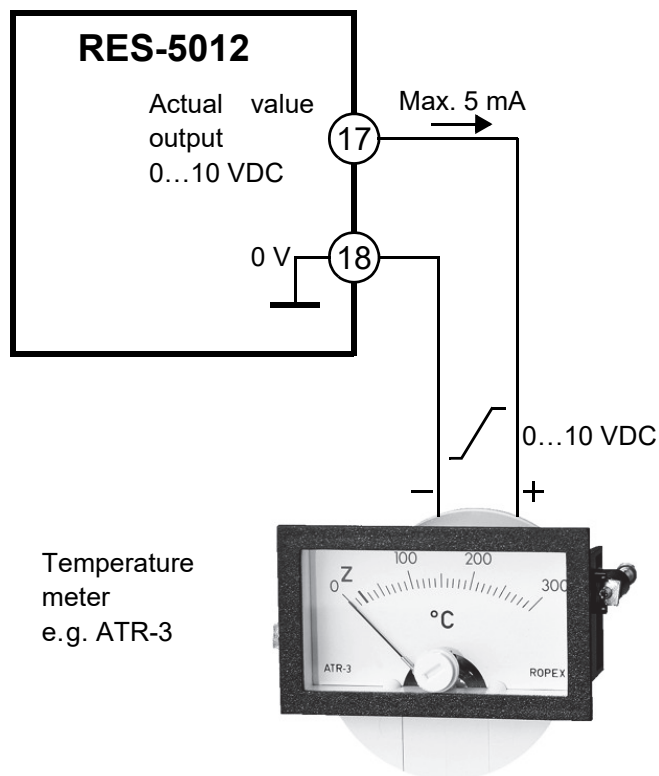

Voltage values:

- 0 VDC → 0 °C
- 10 VDC → 300 °C or 500 °C, depending on the device configuration

The relationship between the change in the output voltage and the ACTUAL temperature is linear.

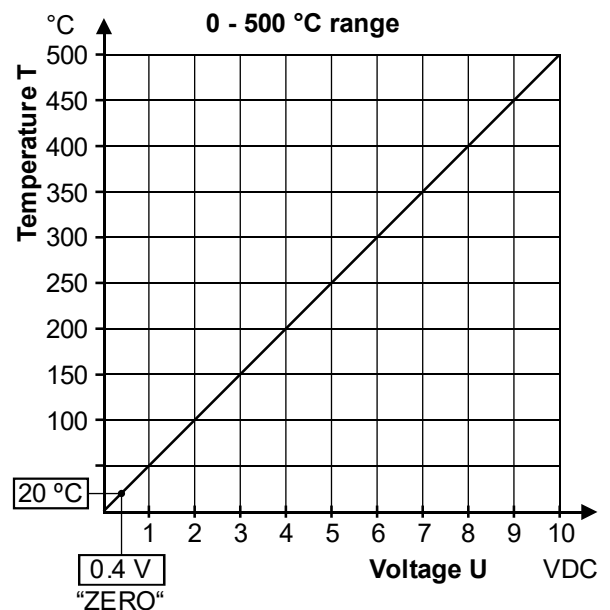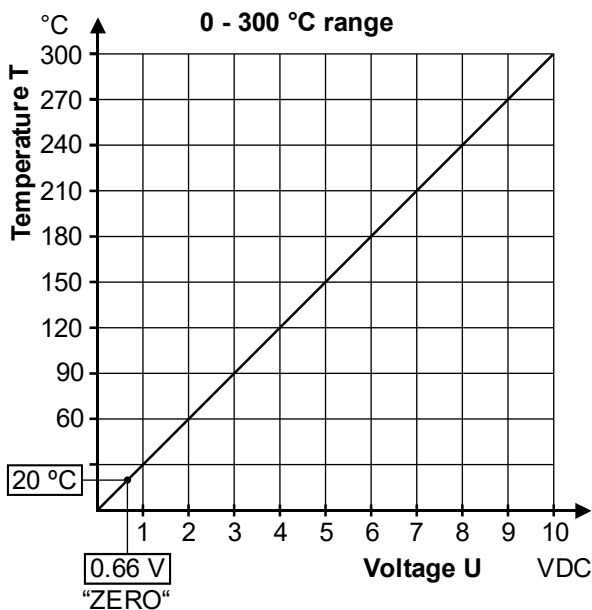

An indicating instrument can be connected to this output in order to visualize the temperature of the heatsealing band.

The ROPEX ATR-x temperature meter is optimally adapted to this application in every respect (size, scale, dynamic behavior) and can be used for this, if needed (↪ section 6 "Mounting and installation" on page 7).

The meter not only facilitates SET-ACTUAL comparisons but also enables other criteria such as the heating rate, set point achieved within the specified time, cooling of the heatsealing band etc. to be evaluated.

The temperature meter additionally permits disturbances in the control loop (loose connections, contacting or wiring problems) as well as any line disturbances to be observed extremely efficiently and interpreted accordingly.

The same applies if several neighbouring control loops interfere with one another.

If a fault is signalled, this analog output is used to display a selective error message (↪ section 8.19 "Error messages" on page 49).

8.11 Booster connection


The RES-5012 controller has a connection for an external switching amplifier (booster) as standard. This connection (at terminals 15+16) is necessary for high primary currents (continuous current > 5 A, pulsed current > 25 A). The booster should be connected as described in section 6.7 "Wiring diagram with booster connection" on page 14.



The connecting cable to the booster must not be longer than 1 m; it must also be twisted in order to reduce EMC interference to a minimum.

8.12 USB interface for visualization software ROPEXvisual®


A USB interface (type: Micro USB) is provided for system diagnostics and process visualization. This USB interface enables a data connection to be set up to ROPEXvisual®, the ROPEX visualization software.

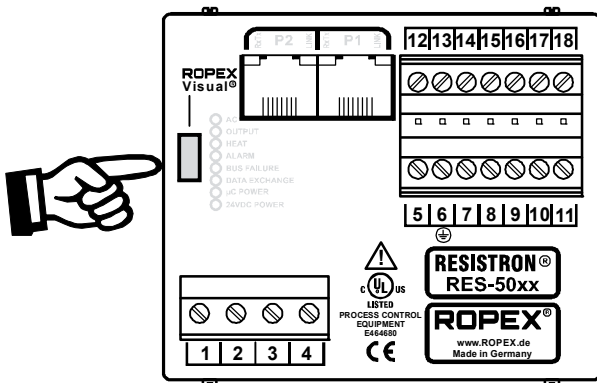

The ROPEX visualization software is described in a separate document. The software and the documentation are available in the [download area](#) (search term: "Visual").

8.13 AUX interface

Internal interface for diagnostics and maintenance. This interface is not currently available.

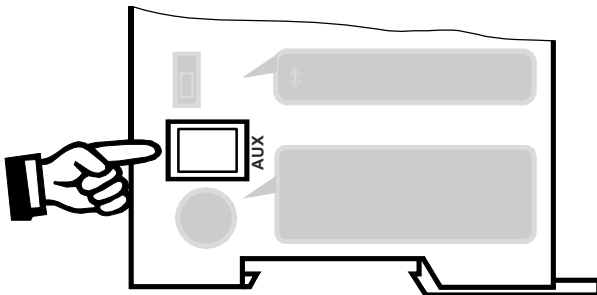

8.14 Total cycle counter

The number of heatsealing cycles executed since the controller was shipped is stored in the internal memory (ST bit = 1). This is a read-only counter which cannot be reset. It can be displayed in the ROPEX visualization software (↪ section 8.12 "USB interface for visualization software ROPEXvisual®" on page 47), via the integrated web server, or using the acyclic services of the EtherCAT® interface.

8.15 Operating hours counter

The number of operating hours since the controller was shipped is stored in the internal memory. This counter works with a resolution of six minutes. It is a read-only counter which cannot be reset. It can be displayed in the ROPEX visualization software (↪ section 8.12 "USB interface for visualization software ROPEXvisual®" on page 47), via the integrated web server, or using the acyclic services of the EtherCAT® interface.

8.16 Data memory for error messages and AUTOCAL

To simplify error diagnoses during operation, the RES-5012 controller has a data memory for error messages (↪ section 8.19 "Error messages" on page 49) and executed AUTOCAL functions (↪ section 8.5.1 "Automatic zero calibration AUTOCAL (AC)" on page 24).

The 400 most recent messages are stored. They can be read out and displayed in the ROPEX visualization software (↪ section 8.12 "USB interface for visualization software ROPEXvisual[®]" on page 47) or via the integrated web server.

The RES-5012 also features a built-in clock (↪ section 8.17 "Built-in clock (date and time)" on page 48). All messages are saved in the data memory together with their date and time of occurrence (timestamp).



The stored messages can be exported as a csv-file. If needed, ROPEX can evaluate the exported file and create an error diagnosis.

8.17 Built-in clock (date and time)

The RES-5012 has a built-in clock. All messages are saved in the data memory (↪ section 8.16 "Data memory for error messages and AUTOCAL" on page 48) together with their date and time of occurrence (timestamp). Error messages can thus be interpreted more accurately whenever a problem needs to be analyzed.

The built-in clock can be set and read out in the ROPEX visualization software (↪ section 8.12 "USB interface for visualization software ROPEXvisual[®]" on page 47) or using the acyclic services of the EtherCAT[®] interface. The date and time can be read out but not set via the integrated server.

A maintenance-free capacitor is used to operate the clock. There is no battery that has to be replaced every now and then.

The controller must remain switched on for at least three hours to make sure the clock's capacitor is fully charged. When the controller is switched off, the fully charged capacitor can keep the clock running for approximately 2...4 weeks. If the controller is switched off for longer, the date and time will have to be set again. You can do this in the ROPEX visualization software (↪ section 8.12 "USB interface for visualization software ROPEXvisual[®]" on page 47) or using the acyclic services of the EtherCAT[®] interface.

The capacitor is not charged when it leaves the factory. When the controller is started up, you must set the clock if you want error messages to be saved in the data memory (↪ section 8.16 "Data memory for error messages and AUTOCAL" on page 48) together with their date and time of occurrence.

The controller can also be operated without the clock. In this case, the dates and times that are saved in the data memory will be invalid (↪ section 8.16 "Data memory for error messages and AUTOCAL" on page 48). However, this has no effect on the temperature control functions.

8.18 System monitoring / alarm output

To increase operational safety and avoid faulty heatsealing, this controller incorporates special hardware and software features to facilitate selective error detection and diagnosis. Both the external wiring and the internal system are monitored.

These features significantly assist the operator in identifying the cause of abnormal situations.

A system fault is reported or differentiated by means of the following indications.

A.) Red "ALARM" LED on the controller with three states:

1. **Blinking fast (4 Hz):**

The AUTOCAL function should be executed (error codes 104...106, 211, 302, 303).

2. **Blinking slowly (1 Hz):**

The system configuration is incorrect and the zero calibration (AUTOCAL function) was unsuccessful (↪ section 7.2 "Device configuration" on page 15). This corresponds to error codes 111...114).

3. Lit continuously:

A fault is preventing the system from starting (error codes 101...103, 107, 108, 201...203, 304, 307, 308, 9xx). As a rule, this refers to an external wiring fault.

B.) Alarm relay (relay contact terminals 12+13+14):

This relay is set at the factory as follows:

- **DE-ENERGIZED** in operating states A.1 and A.2 but energized if a START signal is present in one of these states.
- **ENERGIZED** in operating state A.3.



If the alarm relay has the opposite configuration to the factory setting (↪ section 7.2.3 "Configuration of the rotary coding switch for the Device ID" on page 16), these states are reversed.

C.) Error code indicated via the EtherCAT® protocol:

If an error occurs, the AL bit is set and possibly also the WA bit. The error code is contained in the third word at bit positions 0...9 (↪ section 8.6.13 "Error codes" on page 28).

D.) Error code indicated via the actual value output 0...10 VDC (terminals 17+18):

Since a temperature indication is no longer necessary if a fault occurs, the actual value output is used to display error messages whenever a fault is signaled.

Thirteen voltage levels are available for this purpose in the 0...10 VDC range, each of which is assigned an error code (↪ section 8.19 "Error messages" on page 49).

For statuses that require AUTOCAL, or if the device configuration is incorrect (error codes 104...106, 111...114, 211, 302, 303), the signal at the actual value output jumps back and forth at 1 Hz between the voltage value corresponding to the error and the end of the scale (10 VDC, i.e. 300 °C or 500 °C). If the START signal is present in one of these states, the voltage value does not change any more.

If a ROPEX temperature meter (e.g. an ATR-x) is connected to the controller's analog output, the temperature indication can be directly assigned to the error codes if an alarm is signaled.

An error message can be reset by setting the RS bit or by momentarily interrupting the power to the controller (24 VDC supply voltage).

If an error message is reset with the RS bit, it is not actually reset until the RS bit is reset.

Invalid error messages may appear when the controller is switched off owing to the undefined operating state. This must be taken into account when they are evaluated by the higher-level controller (e.g. a PLC) in order to avoid false alarms.


8.19 Error messages

In addition to the error codes diagnosed in the event protocol you can also access the „Diagnosis history“ object. The error messages appear in text list with a time stamp.

The table below shows the meaning of the error codes. It includes a description of each error as well as the required corrective action.

The block diagram in section 8.20 "Fault areas and causes" on page 54 helps you clear a particular error quickly and efficiently.

Thirteen voltage levels for diagnosing errors appear at the RESISTRON® temperature controller's actual value output. The error messages are even more finely differentiated internally. The 3-digit error codes described below can be displayed via the EtherCAT® interface or in the ROPEX visualization software (↪ section 8.12 "USB interface for visualization software ROPEXvisual®" on page 47) to facilitate troubleshooting.

 **If the actual value output is evaluated in order to identify an error message – in the higher-level controller, for instance – the tolerance window must be adjusted to prevent incorrect interpretations. Please note the tolerances of the actual value output (↪ section 10 "Technical data" on page 56).**

Part 1 of 3: Error messages (faults)

NOTE: The error messages shown here are output as faults (constant error voltage at actual value output, alarm LED lit continuously, alarm relay energized).

Error code	Act. val. output voltage [V]	Cause	Action if machine started for first time	Action if machine already operated, HS band not changed
101	0.66	No current signal	Fault area ①	Fault area ①
102	1.33	No voltage signal	Fault area ③	Fault area ③
103	2.00	No current / voltage signals	Fault area ②	Fault areas ②⑨
107	2.66	Temperature step, down	Fault areas ④⑤⑥ ("loose contact")	Fault areas ④⑤⑥ ("loose contact")
108		Temperature step, up		
307		Temperature too high / low (↪ section 8.7.9)	-	-
308				
309				
310				
201	3.33	No line frequency / line frequency fluctuates	Check power supply	Check power supply
202		Line frequency too high / fluctuates		
203		Line frequency too low / fluctuates		
304	4.00	Heatup time too long (↪ section 8.7.10)	Perform RESET	Perform RESET
901	4.66	No line voltage / sync signal	↪ Section 8.2	↪ Section 8.2
913		Triac defective	Replace device	Replace device
914		Internal fault, device defective	Replace device	Replace device
915				
916				
917	Jumper for alarm output incorrect	Check jumper	Check jumper	
918				

Part 2 of 3: Error messages (warnings)

NOTE: The specified error messages are initially output as warnings (actual value output jumps back and forth between two values, alarm LED blinks, alarm relay de-energized). When the START signal is activated, the warning changes to a fault (actual value output no longer jumps back and forth, see bold italic values, alarm LED lit continuously, alarm relay energized).


Error code	Act. val. output voltage [V]	Cause	Action if machine started for first time	Action if machine already operated, HS band not changed
104	↔ 5.33 ↔ ↔ 10 ↔	Current signal incorrect, incorrect impulse transformer specification	Perform AUTOCAL , check transformer specification, fault areas ⑦ ⑧	Fault areas ④ ⑤ ⑥ ("loose contact")
105		Voltage signal incorrect, incorrect impulse transformer specification		
106		Current and voltage signals incorrect, incorrect impulse transformer specification		
302		Temperature too low, calibration not performed, loose contact, ambient temp. fluctuates	Perform AUTOCAL and / or	
303		Temperature too high, calibration not performed, loose contact, ambient temp. fluctuates	fault areas ④ ⑤ ⑥ ("loose contact")	
211	↔ 6.00 ↔ ↔ 10 ↔	Data error	Perform AUTOCAL	Perform AUTOCAL

Part 3 of 3: Error messages (warnings)

NOTE: The specified error messages are initially output as warnings (actual value output jumps back and forth between two values, alarm LED blinks, alarm relay de-energized). When the START signal is activated, the warning changes to a fault (actual value output no longer jumps back and forth, see bold italic values, alarm LED lit continuously, alarm relay energized).

Error code	Act. val. output voltage [V]	Cause	Action if machine started for first time	Action if machine already operated, HS band not changed
111	<i>6.66</i> ↔ 10 ↔	Current signal incorrect, no calibration possible	Fault area ⑧, check configuration	Fault areas ④ ⑤ ⑥ ("loose contact")
112	<i>7.33</i> ↔ 10 ↔	Voltage signal incorrect, no calibration possible	Fault area ⑦, check configuration	Fault areas ④ ⑤ ⑥ ("loose contact")
113	<i>8.00</i> ↔ 10 ↔	Current / voltage signals incorrect, no calibration possible	Fault area ⑦ ⑧, check configuration	Fault areas ④ ⑤ ⑥ ("loose contact")
114	<i>8.66</i> ↔ 10 ↔	Temperature fluctuates, no calibration possible	Perform AUTOCAL and / or fault areas ④ ⑤ ⑥ ("loose contact")	Perform AUTOCAL and / or fault areas ④ ⑤ ⑥ ("loose contact")
115		Ext. calibration temp. too high, no calibration possible	Perform AUTOCAL with ext. calibration temperature ≤40 °C	Perform AUTOCAL with ext. calibration temperature ≤40 °C
116		Ext. calibration temp. fluctuates, no calibration possible	Perform AUTOCAL with stable ext. calibration temperature	Perform AUTOCAL with stable ext. calibration temperature

8.20 Fault areas and causes

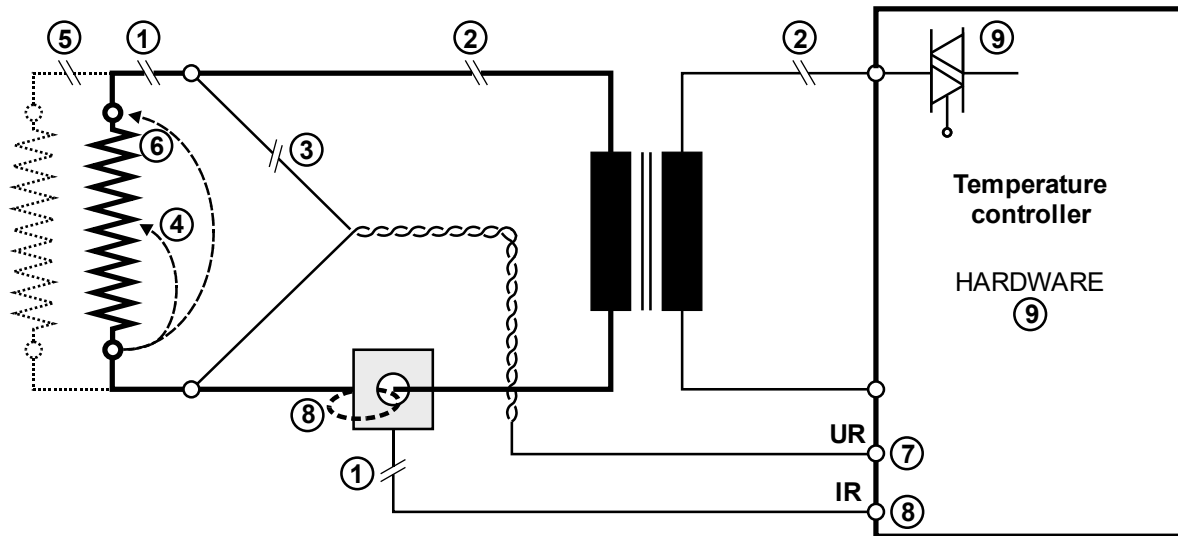






The table below explains the possible fault causes.

Fault area	Explanation	Possible causes
①	Load circuit interrupted after U_R pickoff point	- Wire break, heatsealing band break - Contact to heatsealing band is defective
	Current transformer signal interrupted	- I_R measurement cable from current transformer interrupted
②	Primary circuit interrupted	- Wire break, triac in controller defective - Primary winding of impulse transformer interrupted - Kb contactor open
	Secondary circuit interrupted before U_R pickoff point	- Wire break - Secondary winding of impulse transformer interrupted
③	No U_R signal	- Measurement cable interrupted
④	Partial short-circuit (ΔR)	- Heatsealing band partially bypassed by conducting part (clamp, opposite heatsealing bar etc.)
⑤	Parallel circuit interrupted	- Wire break, heatsealing band break - Contact to heatsealing band is defective
⑥	Total short-circuit	- Heatsealing band incorrectly installed, no insulation at heatsealing bar ends or insulation incorrectly installed - Heatsealing band completely bypassed by conducting part
⑦	U_R signal incorrect	- U_2 outside of permissible range from 0.4...120 VAC
⑧	I_R signal incorrect	- I_2 outside of permissible range from 30...500 A
	Wire incorrectly laid through current transformer	- Check number of turns (two or more turns required for currents < 30 A)

Fault area	Explanation	Possible causes
⑨	Internal device fault / no line voltage	<ul style="list-style-type: none">- Hardware fault (replace controller)- Jumper for alarm relay not connected or incorrectly connected- No line voltage

9 Factory settings

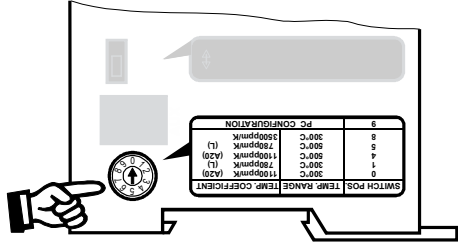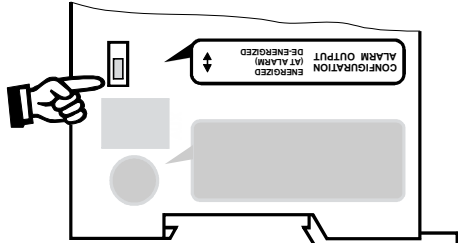

The RESISTRON® temperature controller RES-5012 is configured at the factory as follows:



<p><u>Rotary coding switch</u> for heatsealing band alloy and temperature range</p>	 <table border="1" data-bbox="667 524 879 607"> <thead> <tr> <th>SWITCH POS.</th> <th>TEMP. RANGE</th> <th>TEMP. COEFFICIENT</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>320°C</td> <td>1100pmk (A20)</td> </tr> <tr> <td>1</td> <td>320°C</td> <td>1700pmk (L)</td> </tr> <tr> <td>2</td> <td>320°C</td> <td>1700pmk (L)</td> </tr> <tr> <td>3</td> <td>320°C</td> <td>1700pmk (L)</td> </tr> <tr> <td>4</td> <td>320°C</td> <td>1700pmk (L)</td> </tr> <tr> <td>5</td> <td>320°C</td> <td>1700pmk (L)</td> </tr> <tr> <td>6</td> <td>320°C</td> <td>1700pmk (L)</td> </tr> <tr> <td>7</td> <td>320°C</td> <td>1700pmk (L)</td> </tr> <tr> <td>8</td> <td>320°C</td> <td>1700pmk (L)</td> </tr> <tr> <td>9</td> <td>320°C</td> <td>1700pmk (L)</td> </tr> </tbody> </table>	SWITCH POS.	TEMP. RANGE	TEMP. COEFFICIENT	0	320°C	1100pmk (A20)	1	320°C	1700pmk (L)	2	320°C	1700pmk (L)	3	320°C	1700pmk (L)	4	320°C	1700pmk (L)	5	320°C	1700pmk (L)	6	320°C	1700pmk (L)	7	320°C	1700pmk (L)	8	320°C	1700pmk (L)	9	320°C	1700pmk (L)	<p>Heatsealing band alloy: Alloy 20 Temperature range: 300 °C</p> <p>Rotary coding switch: "0" position</p>
SWITCH POS.	TEMP. RANGE	TEMP. COEFFICIENT																																	
0	320°C	1100pmk (A20)																																	
1	320°C	1700pmk (L)																																	
2	320°C	1700pmk (L)																																	
3	320°C	1700pmk (L)																																	
4	320°C	1700pmk (L)																																	
5	320°C	1700pmk (L)																																	
6	320°C	1700pmk (L)																																	
7	320°C	1700pmk (L)																																	
8	320°C	1700pmk (L)																																	
9	320°C	1700pmk (L)																																	
<p><u>Slide switch</u> for alarm relay</p>		<p>Alarm relay energized at alarm</p>																																	
<p><u>Automatic phase angle compensation</u> (AUTOCOMP)</p>		<p>AUTOCOMP: Off</p>																																	
<p><u>Temperature diagnosis</u></p>		<p>Temperature diagnosis: Off</p>																																	
<p><u>Heatup timeout</u></p>		<p>Heatup timeout: Off</p>																																	

10 Technical data


 **Operation of the temperature controller outside of these technical specifications results in loss of warranty and can cause defects.**

<p>Type of construction</p>	<p>Housing for installation in an electrical cabinet Snaps onto a standard top hat rail (TS35 rail, 35 mm) acc. to DIN EN 50022 Dimensions: 90 x 75 mm; depth: 135 mm (incl. terminals)</p>
------------------------------------	---

<p>Line voltage</p>	<p>Connected between neutral conductor and one line conductor: 110 VAC -15%...300 VAC +10%</p> <p>or</p> <p>Connected between two line conductors: 110 VAC -15%...415 VAC +10%</p> <p> The voltage between the line conductor and ground must not be more than 300 VAC.</p>
<p>Power supply system</p>	<p>Balanced TN or TT system, max. 415 VAC Installation category III</p> <p> Operation in potential-free systems (e.g. an IT system) is only permitted after consultation with ROPEX.</p>
<p>Line frequency</p>	<p>47...63 Hz, automatic adjustment to frequencies in this range</p>
<p>Current consumption (primary current of impulse transformer)</p>	<p>$I_{max} = 5 \text{ A}$ (duty cycle = 100%) $I_{max} = 25 \text{ A}$ (duty cycle = 20%, cycle duration 1 min)</p>
<p>24 VDC supply voltage Terminals 5+7</p>	<p>24 VDC, $I_{max} = 200 \text{ mA}$ Tolerance: $\pm 10\%$ SELV or PELV supplied from max. 300 VAC, Cat II</p>
<p>Measuring range</p>	<p>Secondary voltage U_R: 0.4...120 VAC Secondary current I_R: 30...500 A (with PEX-W4/-W5 current transformer) ↳ ROPEX Application Report</p>
<p>EtherCAT® interface</p>	<p>2 Ethernet switch ports RJ45 Wiring: IEC 61784-5-3 Data transfer rate: 100 Mbit/s Data transport layer: Ethernet II, IEEE 802.3 Addressing: automatic by means of topology or rotary coding switch</p>
<p>Heatsealing band type and temperature range</p>	<p>The temperature range and temperature coefficient settings can also be specified in the ROPEX visualization software (↳ section 8.12 "USB interface for visualization software ROPEXvisual®" on page 47) in addition to using the rotary coding switch or via the EtherCAT® interface (see below):</p> <p>Temperature range: 200 °C, 300 °C, 400 °C, or 500 °C Temperature coefficient: 400...4000 ppm/K (variable setting range)</p> <p>Five different ranges can be set using the rotary coding switch or via the EtherCAT® interface:</p> <p>Temperature coefficient 1100 ppm/K, 0...300 °C (e.g. Alloy 20) Temperature coefficient 780 ppm/K, 0...300 °C (e.g. Alloy L) Temperature coefficient 1100 ppm/K, 0...500 °C (e.g. Alloy A20) Temperature coefficient 780 ppm/K, 0...500 °C (e.g. Alloy L) Temperature coefficient 3500 ppm/K, 0...300 °C (e.g. NOREX)</p> <p>Please take the necessary setting from the ROPEX application report</p>
<p>Analog output (actual value) Terminals 17+18</p>	<p>0...10 VDC, $I_{max} = 5 \text{ mA}$ Equivalent to 0...300 °C or 0...500 °C Accuracy: $\pm 1\%$ plus 50 mV</p>

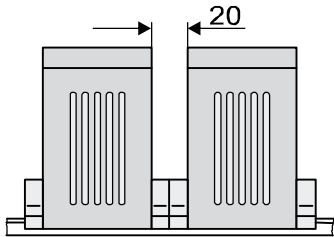Alarm relay Terminals 12, 13, 14	$U_{\max} = 30 \text{ V (DC/AC)}$, $I_{\max} = 0.2 \text{ A}$, changeover contact, potential-free
Power loss	Max. 20 W
Ambient conditions	Max. altitude: 2000 m Ambient temperature: +5...+45 °C Max. relative humidity: 80% at temperatures up to +31 °C, decreasing linearly to 50% relative humidity at +45 °C
Degree of protection	IP20
UL file	E464680
Installation	<p>A minimum safety clearance of 20 mm all round (e.g. from other devices and wiring) must be allowed when installing the device.</p> <p>The moving clip required for fastening must be facing down for mounting on a horizontal top hat rail.</p> <p>End holders to mechanically fix the controller must be fitted at both ends for mounting on a vertical top hat rail.</p> 
Weight	Approx. 0.5 kg (incl. connector plug-in parts)
Housing material	Plastic, polycarbonate, UL-94-V0
Connecting cable Type / cross-sections	Rigid or flexible; 0.2...2.5 mm ² (AWG 24...12) plug-in connectors Plug-in connectors: Tightening torque: 0.5...0.6 Nm (screwdriver: SZS 0.6x3.5 mm)  If ferrules are used, they must be crimped in accordance with DIN 46228 and IEC / EN 60947-1. This is essential to ensure proper electrical contact in the terminals.

11 Dimensions

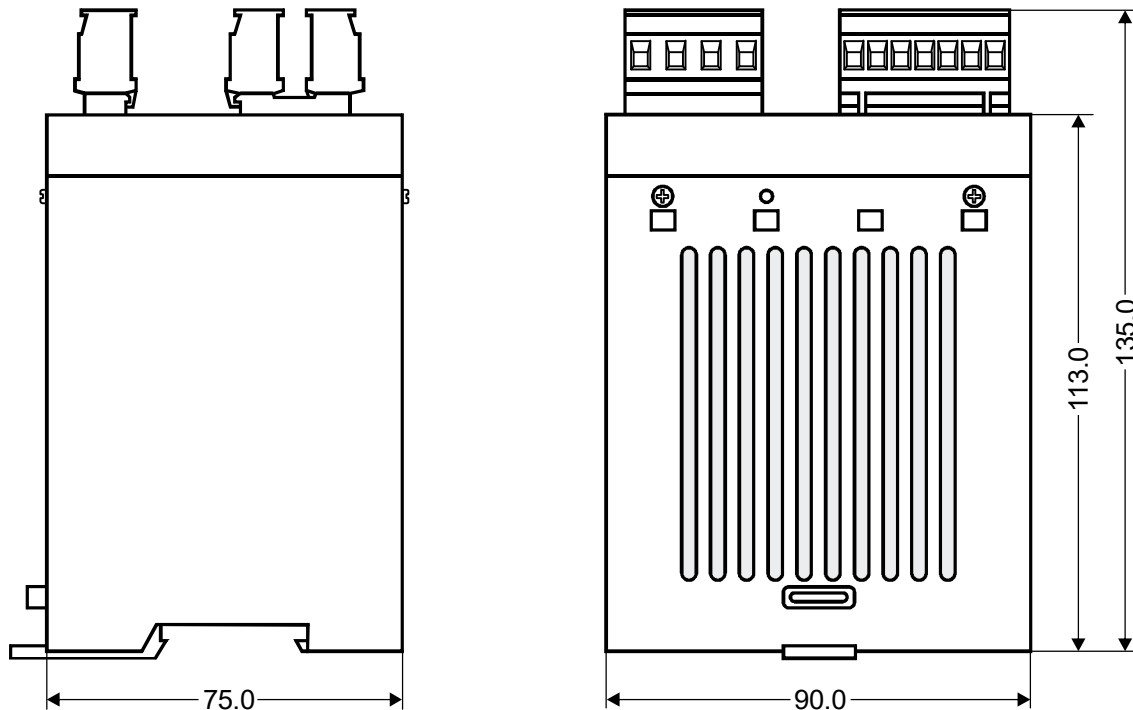

12 Modifications

12.1 Modifications (MODs)

Owing to its universal design, the RESISTRON[®] temperature controller RES-5012 is suitable for a very wide range of heatsealing applications.

One modification (MOD) is available for the RESISTRON[®] temperature controller RES-5012 for implementing special applications.

The modifications must be ordered separately.



MOD 01

Booster for low secondary voltages ($U_R = 0.2...60$ VAC). This modification is necessary, for example, for very short or low-resistance heatsealing bands.

13 How to order

Images exemplary

	<p>Controller RES-5012 Power supply 115...400 VAC, art. no. 7501200 Scope of supply: Controller includes connector plug-in parts (without current transformer)</p> <p>Modification MOD . . (optional, if required) For example → 01: MOD 01, art. no. 800001 (booster for low voltage)</p> <p>Please indicate the article numbers of the controller and the required modifications (optional) in all orders, e.g. RES-5012 + MOD 01 (controller with booster for low voltage) Order of art no. 7501200 + 800001</p>
	<p>Current transformer PEX-W5 Art. no. 885107</p>
	<p>Monitoring current transformer MSW-2 Art. no. 885212</p>
	<p>Network filter LF- → 06480: Continuous current 6 A, 480 VAC, art. no. 885500 (with UL certification) 10520: Continuous curr. 10 A, 520 VAC, art. no. 885504 (with UL and CSA certification) 35480: Continuous curr. 35 A, 480 VAC, art. no. 885506 50520: Continuous curr. 50 A, 520 VAC, art. no. 885509 (with UL and CSA certification)</p>
	<p>Impulse transformer</p> <p>For design and order specifications, see ROPEX application report Design in accordance with EN 61558 Available with UL certifications and thermal switch, if necessary. In addition, we can individually design and offer you an upstream transformer.</p>
	<p>Temperature meter ATR - . → 3: 300 °C range, art. no. 882130 5: 500 °C range, art. no. 882150</p>

	<p>Booster B- . . .</p> <p>→ 075415: Impulse loaded 75 A, 415 VAC, art. no. 885302 100400: Impulse loaded 100 A, 400 VAC, art. no. 885304</p>
	<p>Lines</p> <p>For design and order specifications, see ROPEX application report</p>

14 Index

Numbers

24VDC supply voltage 57

A

AA bit 26
Actual value 28
Actual value output 45
AC bit 24
AG bit 26
Alarm output 48
Alarm relay 17, 58
Alloy 16, 19
Altitude 58
AL bit 18, 26
Ambient conditions 58
Ambient temperature 58
Application Report 8, 11
AUTOCAL 7, 18
 Active 26
 Blocked 24, 26
 Starting 24
AUTOCOMP 36
Automatic phase angle compensation 36
Automatic zero calibration 18, 24
Automatic zeroing 7
AUTOTUNE 7
AUX interface 47

B

Booster 14, 61
Booster connection 46
Burning in (heatsealing band) 17, 19

C

Circuit-breaker 10
Control active 27
Current transformer 11, 60

D

Data format 36
Data memory 48
Date 48
Degree of protection 58
Dimensions 59
Disposal 5

E

Error code format 36
Error diagnosis 7
Error messages 49
External switching amplifier 14

F

Factory settings 56
Fault 26
Fault areas 54
Fuse 10

H

Heatsealing band type 57
Heatup timeout 39

I

Impulse transformer 10, 60
Input data 23
Installation 7, 58
Installation procedure 7
Installation regulations 8

L

Line filter 4, 10, 11
Line frequency 57
Line voltage 57, 60

M

Maintenance 5, 56
Master AUTOCAL (MA) 25
Measurement interruption 23, 28
Measurement pause 25
Measuring impulse duration 36
Measuring range 57
Modification MOD 59, 60
Monitoring current transformer 60
MP bit 25
MSW-2 60
MU bit 28

N

Network filter 60
Network frequency 7

O

Output data 26
Over-current protection 10

P

PEX-W4/-W5 4, 11
PEX-W5 60
Phase angle compensation 36
Power loss 58
Power supply 10
Power supply system 57

R

RA bit 19, 27
Relative humidity 58
Replacement (heatsealing band) 17, 19
Reset 25
ROPEXvisual 47
RS bit 25

S

Set point 26
Standby mode 44
Start 24
Startup 15
ST bit 19
System diagnosis 47
System monitoring 48

T

TCR 3, 17
Temperature achieved 26
Temperature coefficient 3, 17
Temperature diagnosis 38, 39
Temperature meter 46, 60
Temperature OK 26
Temperature range 16, 57
Temperature regulation 6

TE bit 26
Thermal impulse process 6
Time 48
Timestamp 48
TO bit 26
Transformer 4, 10, 60
Transportation 5
Type of construction 56

U

UL file 58
Undervoltage detection 44
USB interface 47
Use 6

V

View of the device 15
Visualization software 47

W

WA bit 26
Web server 41
Wiring 8, 10
Wiring diagram 13, 14